

 
Android series

In order to use the device in the correct way, please read the manual carefully. We will not notice you the specification or design update of due to the technology improvement.

User Manual

Car Entertainment and Navigation System

Android series

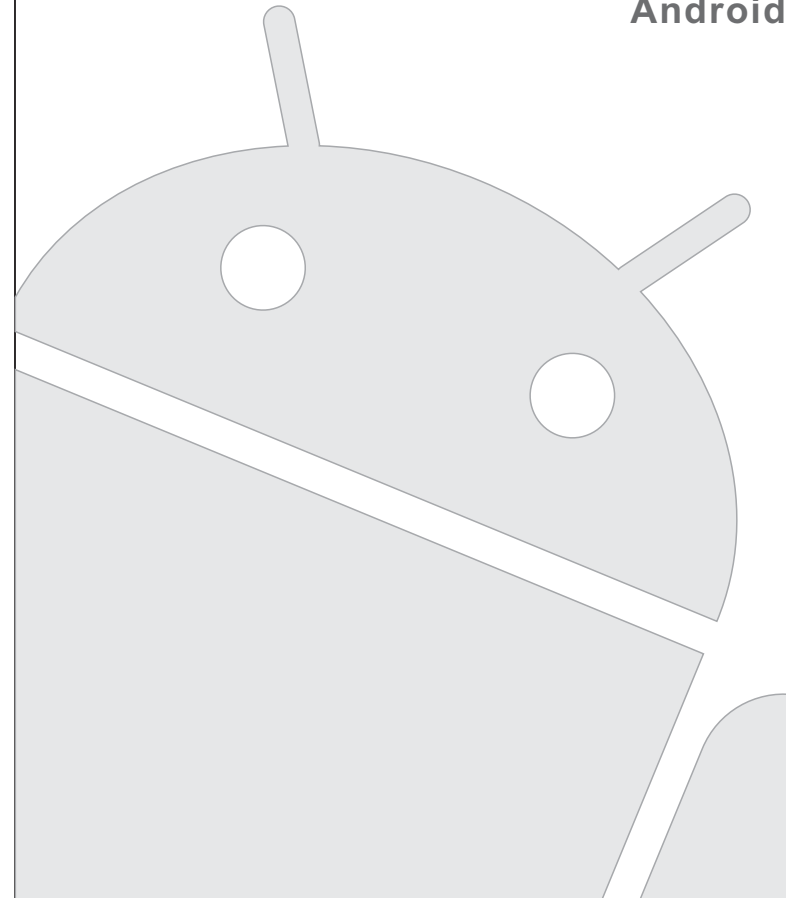



Foreword



Thank you for choosing the car audio-visual navigation system of this company!

When you use this product, please read all the information attached with it, this manual is introduced all the functions of audio-visual navigation system ,so that you can facilitate the process easier. Through it, you can obtain information about products introduction, operation methods, make sure the operation is more convenience.

The display picture example of manual referenced may be a little different from the actual picture.

The display contents of this manual may be a little different with the actual content.

If any parameters change when Products continue to update and upgrade their functions, will be added to make without notice. Any problem please check the details with the agent, thank you for your support and cooperation!

NOTE: The information of this manual protected by copyright, any part of it without company prior written permission is not permitted in any way to copy and photocopy. The Company reserves the final explanation about three guarantees warrant and relative information in this manual.

Contents



一、 Before the Operation	01
1. Notice for safety items	01
2. Notice before Installation	03
3. System installation	04
4. Other notice	06
二、 Basic Operation	12
5. Button function instruction	12
6. Description of Buttons on Remote Control	13
7. Turn on/off the unit	16
8. Main Menu	16
9. Radio Function	17
10. Bluetooth Hands Free communication operation	20
11. Music function	24
12. Video playing function	26
13. Navigation function	27
14. Virtual CD Changer Operation	28
15. Process explorer Operation	30
16. Volume setup Operation	31
17. Picture browser operation	32
18. Email Operation	33
19. DVD features operation	35
20. Play the CD disc	40
21. Phone Book function of operation	41
22. Calendar	42



Contents

23. Browser	42
24. Global Time	43
25. Record	43
26. Digital TV	44
27. Analog TV player function operation	52
28. Schedule management function operation	53
29. 2- zone settings	53
30. Operation for Maintenance- Record	54
31. Operation for IPod Function	55
32. GPS Monitor	56
33. Operation for File Management	56
34. Operation for Electron-Book	57
35. Operation for DVR	58
36. Operation for Calculator	59
37. AUX	59
38. Operation for System Setting	60
39. Recorder Function	67
三、 Troubleshooting	68
四、 Troubleshooting	70



! Warning

- In order to avoid accidents, a possible violation of applicable law, do not use other function as purposes expect navigation when driving.
- In some areas, it is illegal for the drivers or other people in car to watch the images of the display.

Notice for safety items

➤ In order to avoid any injury or property damage of the user or other persons, please be sure to read in details and abide the following notice item.

- 1) Read the Manual
- 2) Take good care of the Manual for future use.
- 3) To comply with all the warning and notice of this manual.
- 4) To comply with all operating instructions.
- 5) Regarding the power supply, please refer what the manual stated.
- 6) The installation and wiring distribution of this product needs specialized skills and experience. To ensure safety, commissioned by professional technicians for installation and wiring.
- 7) There is not any parts attached with the products for user to repair and replace, please ask the professional technician with qualification of maintenance to repair and replace.
- 8) Ventilation: Do not plug any ventilation cooling vents, the local shell holes and other openings are for ventilation of heat. In order to ensure machine works stable and reliable, long service life, not to plug the hole cooling, ventilation environment must be maintained to avoid overheating the machine caused by smoking, fire or other danger.



9) Avoid heat source: heat source should be avoided and products will be not installed on local exposure to direct sunlight, high temperature areas; to be away from heat sources, such as heating, heaters, heat or have other things (including magnifier).

10) Avoid Water or Moist: device should avoid water or moist, do not let this machine being exposed to rain or moisture in the environment (as when rain and car washing) to avoid the internal machinery of the short circuit caused the fire, electric shock or other danger.

11) Cleaning: before cleaning machines have to shut down power, and then wipe panel Do not use volatile chemicals (such as gasoline or thinner) to clean panel.

12) Avoid the matter or water into the device. to prevent foreign matter or liquid into the inside of the machine, do not insert the foreign body from the cooling hole or other opening into the machine. If you insert foreign bodies may cause electric shock, machine parts within a short circuit caused the fire, such as the risk of electric shock.

13) Installation device. do not install the unit to the truck, frame, tripod, bracket or table without the manufacturer's recommendations, should be installed on the install fittings which come with machines. When used in the car, pay more attention to firm the installation of this machine, avoid the machine falling down because of the sudden brake and resulting in personal injury.

14) Don't operate the machine in the event of rain or lightning for a long time, have to cut off the machine power.

15) Appear in the following situations, please turn off the local power supply in time, and contact with professional technician.

- A. When the power wire or connector damaged.
- B. When the machines were splashed with liquid or when the entry of foreign matter;
- C. when the machine has been rained or moisture attack;



D. when the machine crashed from a height or as a result of abnormal operation or unreasonable damage caused.

16) LCD Display: do not let the machine decline to avoid LCD screen fragmentation, if so, when the outflow of liquid crystal, do not touch the liquid crystal, so as not to be harmed. Do not heat the liquid crystal display or scratching LCD with sharp objects, touch panel is also susceptible to scratching. The effective pixel of LCD screen is more than 99.99 percent, but 0.01 percent of the pixels could not be lightened normally.

Notice before Installation

- Products of the manufacturers recommend that you do not install or repair their navigation systems by yourself. Installation and maintenance of the product may cause you in danger of electric shock or others, for all installation and maintenance operations of this navigation system please entrust to the service center authorized by manufacturer.
- Forbid to use the following dangerous installing ways and location:
 1. When the car in a sudden stop may cause injury on the driver and passengers.
 2. To avoid the possibility that impeded the operation of the vehicle drivers, such as the driver front seat or the floor near the steering wheel, stick shift.
- Before opening the hole from faceplate in the dashboard panel, make sure that the rear space is enough. Be careful, not to damage the fuel cable, brake cable, electrical components, power lines or cable communications.
- When use the screws, please ensure that they are not contact with any electrification down-lead. Vibration may have damaged wire or insulation skin and lead to a short circuit or other damage to the vehicle.
- In order to ensure proper installation, use the standard method of installation of the required components. If you use any non-standard components, this product can be internal damaged or loose components, leading to damage of the Product.
- If the GPS antenna may lead to the winding column or stick shift that would



be very dangerous. Please ensure that the installation of the product will not disturb driving.

- Please ensure that all leading cable will not be caught by the doors or sliding framework in the seat, so as not to cause a short circuit.
- After finish the installation of navigation systems, please check vehicles and other equipment is correct.
- Some countries may prohibit or restrict to install or use of the system in the vehicle. Please comply with all the rules related to the application of laws and regulations when using, installation and operation of the navigation system.
- This product will be installed in the position between the driver's seat and passenger seat in order not to avoid any damage on the unit by driver and passenger when the car suddenly brake.
- Never install this product on the dashboard, door or columnation and girder, and the position the air bag expanding out and nearby, Please refer to your vehicle owner's manual to find out the area front airbags expanding
- Do not install this product on the location may prevent the vehicles, including airbags, pillows and any operating system performance.
- Avoid the electromagnetic interference: In order to avoid Electromagnetic interference, please try to stay away from the following components of this product, cable or other wire. (FM, AM antenna and its wire, GPS antenna and its wire). And you should arrange every wire to stay away from each other, not make it colligation or cross-banding together. EMI will increase the possibility of showing wrong location.

System installation

 
➤ Voltage rating (as the picture -01)

- 1) This product use for the vehicle with 12V battery and negative GND. Before the installation, check the battery voltage.
- 2) In order to avoid short-circuit system, installed prior to the proposed removal



of the battery negative.

3) Don't cross the fuse of the device, directly connect to the battery.

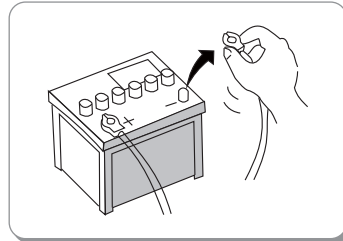

(Picture-01)

 
➤ **The installation of the device**

- 1) First of all, take the original vehicle CD player out.
- 2) Remove the install bracket and screws and keep it.
- 3) Fix the bracket through the screws on the navigation system device.
- 4) Don't connect this product power wire directly to other power-line circuits.
- 5) Fix all the cables according to the hose diagram.
- 6) Install the navigation system in right position and then screw the bracket of the original car to fix it well.

⚠ **Note:** Do not damage or dirty the Dashboard.

➤ **The installation of GPS antenna**

1) To install the antenna in the inner of the car(on the rear shell),please try to make the metal plate stick on the horizontal lever so that the GPS antenna towards the window. GPS antenna will be placed on the metal plate. (GPS antenna fixed by magnetic.) (picture-02) :

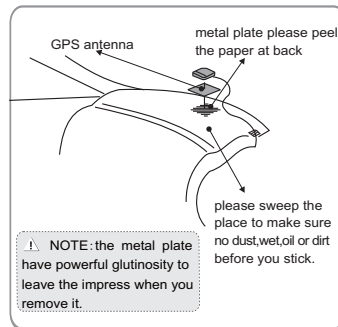


(Picture-02)



2) To install an external antenna (on the car),GPS antenna will be placed in a level position as far as possible, such as roof or cover suitcase Department. (By a fixed magnetic body.) (picture-02) :

 ⚠ **NOTE:** Paste the metal plates, should not be cut it into small pieces. Some models of vehicles do not allow glass windows GPS satellite signal penetration. Then, the GPS antenna should be installed at the outside of the vehicle.

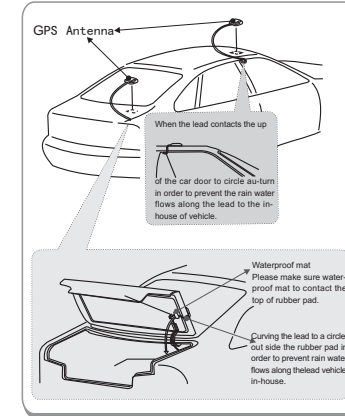

(Picture-03)

➤ **Other notice**

➤ **Operation of remote control**

Do not put remote control on the dashboard, the steering wheel or sunbaked place, especially in the summer as the high temperature will lead to deformation of the remote control. When the car stopped in the sun-baked place, the remote control should be placed on storage boxes or sunproof area. Under direct sunlight, the signal from the remote control may not be correct to receive by the device. Therefore, please put remote control near the front panel of sensors.

➤ **On the proper use of batteries**

If used the battery in a wrong way, due to rupture and leakage of electrolyte and cause fever, fire, injury or failure, as well as the use of pollution around the danger.

- 1) Please put the batteries in the remote after confirm the + and-of batteries.
- 2) Please use the batteries we suggested.
- 3) Please change the exhausted batteries in time for your better use.



- 4) Please take the batteries out, if you don't want to use the remote for a long time.
- 5) Bind up depleted batteries with adhesive tape or store them in a plastic bag for insulation in storage.
- 6) Never charge, short-circuit, dismantle, deform and heat the batteries or throw them into fire or water and make them contact with any metallic object
- 7) Never place batteries or remote control loaded with batteries in the surroundings at high temperature including an enclosed vehicle with doors and windows closed, trunk or a place in the direct sunshine and adjacent to a heater.
- 8) Keep batteries away from children. Send the children to the hospital immediately if they swallow down any battery.

➤ **Notice about Batteries**

- 1) Type of Battery: lithium battery
- 2) Operation Life: approx. 1 year (under indoor temperature) in normal operation
- 3) While disposing batteries, make sure to observe the local regulations on depleted batteries.

 
➤ **Treatments for battery electrolyte leakage are presented below:**

- 1) Wipe off the electrolyte residue inside the battery compartment and put in new batteries.
- 2) When the leaked electrolyte attaches to the human body or skin, rinse it off with water.
- 3) If the electrolyte enters your eyes, do not rub with hands but rinse with water and then go through the medical treatment. Emergency Treatment: In order to prevent life or property damages to the user or others, please immediately turn the power off and deliver it back to the nearest maintenance center or



automobile stereo system dealer for assistance in the case of any foregoing abnormality ,Battery Installation (Picture-04):


- 4) Take out the battery holder. Push and press the point A along the direction shown by the arrow and draw out the battery holder at the point B.
- 5) Put the battery into the battery holder.
- 6) Insert the battery holder back to the original place.

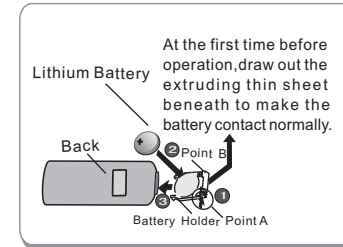

(Picture-04)

➤ **The DVD Disk format**

 The DVD player can play DVD disk which have marked format as Following (picture-05) :

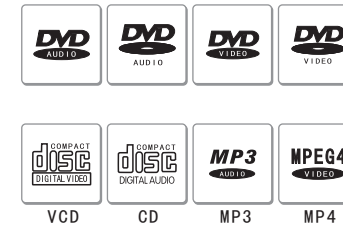


(Picture-05)

⚠ **NOTE:** DVD player can't play the disk which the region code is not compatible. (DVD player is full region code)

➤ **The maintenance of the DVD player**

 Please use the conventional circular disk, not to insert irregular, noncircular disk, otherwise these disks may be stuck inside the DVD player, or the DVD player may not correctly play. Please check before playing on the disk if there is cracks, scratches or curly. Such discs may not play and lead to product failure.

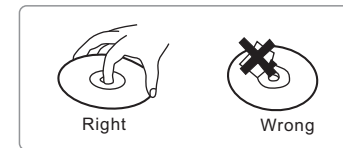

(Picture-06)



Do not use this type of disc. Using disk, do not touch the recording surface (nonprinted surface) Please put the disk in the box if it's not in use. Please don't put the dish far away from the direct sunlight and high temperature place. Please don't put the label, write, paint on the disk surface, or use chemicals on the disk. Please use soft dry cloth to clean the disk from the centre to outside. The DVD player is likely to be internal components moisture if the car using central heating. The dew may cause DVD player can't work properly. So please stop the unit about 1 hour to make the unit clean and dry, if you find the fault like that. And clean the moisture on the disk with soft cloth. The DVD may be disrupted if the car running on a bumpy road.

➤ DVD disk

Regarding some disks, maybe can not use the some special function. Maybe can't play some disks.

➤ DVD digital multi-functional disk

(also known as "Digital Versatile Disc" or "Digital Video Disc") is a popular optical disc storage media format. Its main uses are video and data storage. Most DVDs are of the same dimensions as compact discs (CDs) but store more than six times as much data.

➤ DVD Menu

DVD can show couple of titles, the title menu. Besides, DVD title menu can make some kinds of items shown, the sub-menu came out during the playing, the Dolby Digital and PCM audio, caption, language changed according to the software. While the unit play DVD-R/DVD-RW discs , it only play video format (under video mode), not play the PC files. DVD-R/DVD-RW disks recorded may not play properly due to the property of disk, scratches or dirt on disks or dew on the lens of unit. Disk recorded on personal PC maybe not worked properly, it depends on the setup and environment of the application format, therefore please use a proper format of recording.



➤ CD-R/CD-RW Disk

The DVD player only play completed CD-R/CD-RW Disk. CD disks recorded on personal PC recorded may not play properly due to the property of disk, scratches or dirt on disks or dew on the lens of unit. Disk recorded on personal PC maybe not worked properly, it depends on the setup and environment of the application format, therefore please use a proper format of recording.

CD-R/CD-RW maybe not worked properly under direct sunlight or being in high temperature storage place in the car. The DVD player can not be worked properly with Recorded CD-R/CD-RWDisk's title and information data. (under Audio data CD-DA) You will wait a little long time for CD-RW Disk comparing to traditional CD or CD-R. Please look at the notice before using CD-R/CD-RW notice. MP3 Files (CD-ROM)

➤ MP3 Files (CD-ROM)

MP3 is a kind of audio compact method, which should be brought into Audio level 3 in the MPEG standard. The audio compact method has already been in the depth of personal computers as a standard mode. MP3 can compact original audio data to 10% of its initial size and to keep the voice in high quality. This means that about 10 Track CDs can be recorded on a CD-R disk or CD-RW disk. In this case, there is no need to constantly change CD disks for playing for a long time. This player allows the playing of MP3 files on CD-ROM, CD-R and CD-RW disks as well as the content of any disks compatible with ISO9660 Levels 1 and 2 and ROMEO and JOLOEY file system. It can play the disks recorded compatible in multiple sections. MP3 files are incompatible with the transmission of data written in groups. The maximum number of characters that can be displayed as names of files is 32 characters (calculated from the first character). The maximum number that can be displayed as the name of a folder is 32 characters. If a file is recorded in the ROMEO and JOLIET file system, it can display 32 characters only. When a disk with Mp3 files and audio data (CD-DA), for example, CD-EXTRA and MIXED-MODE CD, they can switch between MPEG and CD-DA to play these two types of discs. The selection sequence of playing and other folders being operated will become the writing order used by writing software.



Therefore, the sequence expected by the playing time can't be in conflict with the actual playing. However, some software permits the setup of playing sequence.

! Notice: When one MP3 file is named, please add the corresponding file extension name (MP3). This player will play the files with the extension name (.MP3) as Mp3 files. To prevent noise and failure, please do not use such an extension name for non-MP3 files.



Button function instruction

➤ [▲] button

When the unit is off, press this button to start the unit and enter into DVD interface; when the unit is on and there is disc in it, press it to eject the disc.

➤ [MENU] button

In any interface, press this button into the relative menu interface

The MENU button in different interface has different functions, please refer to the system function operation instruction.

➤ [BACK] button

In any interface, press this button to back to previous interface.

➤ [Power] button

When the unit is on, short press this button to close the screen and long press it into off status. When the unit is off, short press it into on status.

➤ [HOME] button

Knobs: when the unit is off, press the button to start the unit; when the unit is on, switch the knob to right side, the volume plus, switch it to left, the volume minus, short press it to switch from mute or non-mute status; long press it to turn the unit off.

 
➤ [RESET] button

Stick a needle into the little hole and it will back to the factory original setting mode.

! Note: In some models this knob is used for volume adjust button, some is used for volume adjust knob, some models with full touch screen that haven't the button and knob, **it is based on the model you purchased.**



Description of Buttons on Remote Control

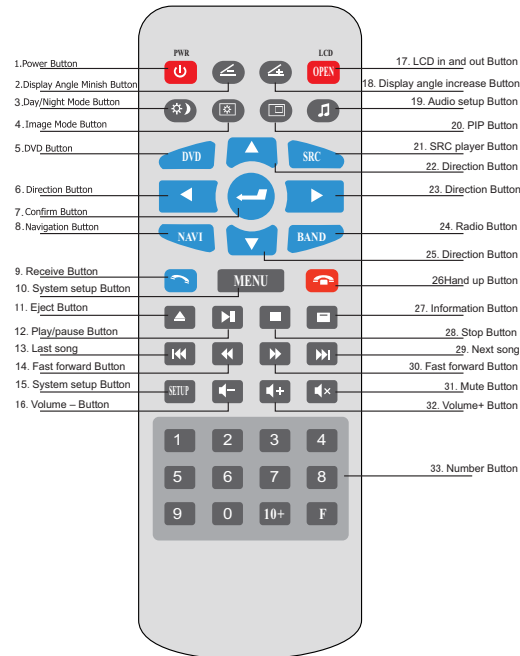

- 1、【Power button】 When the player is off , the player will be power on by pressing this button; when powered on, the player will be power off by pressing this button.
- 2、【Display angle minish button】 this button is no available with the fixed panel models.
- 3、【day/night mode button】 short press this button to switch day mode and the nigh mode.
- 4、【image mode button】 short press this button for different images mode setup , brightness, contrast, hue from 0-40.



- 5、【DVD button】 short press this button to login the DVD player.
- 6、【direction button to left】
- 7、【confirm button】
- 8、【navigation button】 short press this button to enter GPS interface .
- 9、【receive button】 after the player matched with your mobile phone, press this button to answer an incoming call.
- 10、【system setup button】 press this button to enter system setup interface.
- 11、【eject button】 the disk come out after press this button.
- 12、【play/pause button】 when you inserted a disk, press this button to playing , when the player is playing, press this button to pause playing; when the player on paused and stopped status, press this button to playing.
- 13、【last song】 press this button to repeat play the previous song or the previous video.
- 14、【fast forward button】 press this button for fast forward playing.
- 15、【system setup button】 short press this button to enter in the DVD setup interfaces.
- 16、【volume – button】 short press this button to decrease volume.
- 17、【LCD in and out button】 just useful for one din universal.
- 18、【display angle increase button】 the button is no effect for the fixed panel models.
- 19、【audio setup button】 short press for individuated audio setup .
- 20、【PIP button】 short press this button to enter the PIP interfaces.
- 21、【src player button】 short press this button for the main menu.
- 22、【direction button】 up.
- 23、【direction button】 right.



24、【radio button】 when power off , the system will be power on and entering radio interface by pressing this button; when powered on, in the non-radio interface, short press this button to enter radio interface; in the radio interface, short press this button to switch between FM1,FM2,FM3 and AM.

25、【direction button】 down.

26、【hand up button】 when power off , the system will be power on and entering Bluetooth interface by pressing this button; in the Bluetooth interface, if your mobile phone matched with the player, press this button to hang up.

27、【information button】 short press this button to display the information like the title and sequence number of segment about the playing program.

28、【stop button】 press this button to stop playing.

29、【next song】 press this button to playing next song or next video.

30、【fast forward button】 press this button for fast forward playing.

31、【mute button】 short press this button for switch mute or non-mute.

32、【volume+ button】 short press this button to augment volume.

33、【number button】 number from 0-10.



Turn on/off the unit

➤ Turn on the unit

If you turn off the unit by taking out the car key last time, then when you insert the car key again, the unit will turn on automatically. If you turn off the unit by pressing the power button last time, then please press power button to turn it on.

➤ Power off

The system will be power off by pull out the car key. The system will be power off by long pressing this button.

Main Menu

1)When the unit is on, system will enter into main menu automatically. In other interface, press HOME button to get into the main menu, like (picture-07):



(picture-07)

2)Main menu shows the current date and time, you can adjust it in the system setting menu.

3)The icon below the interface is shortcut icon, totally 6 pieces, you can select the 6 icons you like, see the (picture- 08):



(picture-08)

4)All the function icons could be slipped to turn/switch the page, see the (picture - 08,09):

➤ Set the shortcut icon

1) In any interface, long press the function icon for 2 seconds, it will tremble and enlarge, then you can drag it into the shortcut icon bar, or you can delete it from the shortcut icon bar.



(picture-09)

! Notice: GPS works in a complicated program which easy to be flunced by magnet or other external surroundings, leading to failed work(like no image and can't enter into GPS map). If situation like this, please restart GPS and it will back to normal.



Radio Function

➤ Exit/Enter

In main menu, press icon into radio function, like (picture -10):

Press Home, BACK, and icon to exit from radio interface, but the radio is still on.



(picture-10)

➤ Setting operation

Press icon into radio setting menu, like (picture -11, 12, 13):

Setting function include RDS\AF\TA\PTY\PTY SCAN\MODE\AST\ST and so on.

 
1) RDS: RDS function is a special radio system developed by BBC company, which could only be used in Europe area.

2) AF: AF table offers the information sent by the same or adjacent transmitter which receives the broadcast of the same program, the receiver stores this table in order to reduce the time of the search of alternative frequencies. (Needs to be supported by RDS function)


3) TA: TA is a switching signal, specializing in traffic announcement broadcasting status. The receiver will automatically switch to the program which is broadcasting the traffic announcement according to the received signal.



(picture-11)

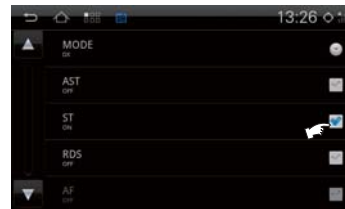

(picture-12)

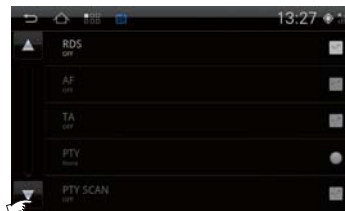 

(picture-13)



After the announcement finished, it will automatically get back the previous menu/function .(Needs to be supported by RDS function)

4) PTY: PTY is A type of program ID, along with the launch of a program, which category the broadcasting programs into the specified programs among the 31 such programs. Receiver Click ID to receive, record this type of program(Needs to be supported by RDS function)

5) MODE: Remote/short distance earch, LOC remote search, DX short distance search

6) AST: Automatically search stations

7)ST: Stereo

➤ Automatic Search

In the setting interface, choose AST icon, press icon into automatic search, during the search , the stations will be stored automatically, press any icon to stop the searching, like (picture 14):



(picture-14)

➤ Semi-automatic search

Press icon or icon into low frequency/ high frequency semi-automatic search status. Press it, it starts to search, press again, it ends searching. Or drag the icon into low frequency/high frequency semi-automatic search status. When the station searched, it will be stored automatically.

➤ Fine-tune search

 
Press or icon into higher frequency/ lower frequency fine tune search. When stations searched, it will be stored automatically.

Notice: In the factory mode interface, you can set the region of radio(Detailed operation please refer to Factory mode setting function).



➤ Remote automatic search/ Semi-automatic search

1) Remote automatic search: on the setting interface, press MODE icon, then select LOC, then press AST icon into remote automatic search. During the search process, the stations will be stored automatically, like (picture -15,16):

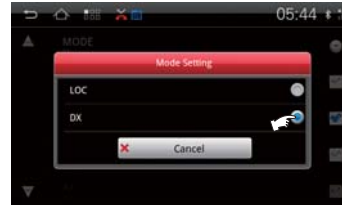

(picture-15)

 
2) Remote manual search: on the setting menu, press MODE icon, select LOC, then press [Back] icon to back to radio interface. Press [Left] icon or [Right] icon into low/high frequency remote manual search. Press it to start searching, press again to stop searching. When the stations searched, they will be stored automatically, like (picture -15,16):



(picture-16)

➤ List playing

1) During the search process, the stations will be stored automatically into the station list. Press [Menu] icon to select the station you want to play.

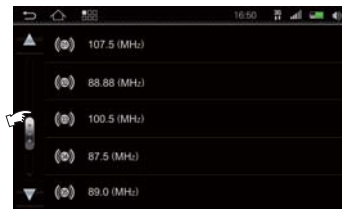

(picture-17)

2) Press [Up] icon to turn to up page, press [Down] icon to turn to down page, or slip [Slide] icon to move from up to down page.

➤ Band Selection

Press the "BND" icon, the band can be switched between FM(MHZ) to AM(KNZ) .

FM band: This unit can be saved for 100 channels.

AM band: This unit can be saved for 100 channels.



(picture-18)



Bluetooth Hands Free communication operation

 
1) The system features with BT hands-free communication function. If your mobile phone equips with BT function, you can set up point to point link with the system, dialing, answering phone, as well as playing music and other functions on the screen.

2) Since there are various brands of mobile phone, their BT module is different from each other. So when it comes to the practical use, some of the functions might be different, even some of them might not compatible with our unit, please forgive for this.

➤ Enter/Exit

On main interface, press [Phone] icon into BT interface, see (picture -19):

Press [Back] or [Home] icon to exit BT interface.

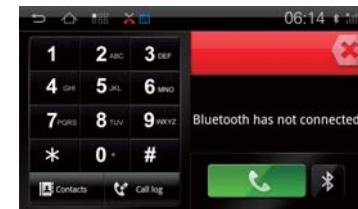


(picture-19)

➤ Pairing and Link

1) Before using the BT hands-free communication function, please pair and link it with your mobile phone first. Press [BT] icon on the main menu, select BT setting, like (picture -20):

 2) Press BT icon, then click on [Check] icon to turn on the BT function and meantime turn BT function of your mobile phone on. Press "Link" icon, then the unit will search automatically. When the system is linked to the phone signal, your mobile shows on the screen. Link it and input the PIN code. After successful match and link, an icon like [Bluetooth] will shown on the bottom right of screen.

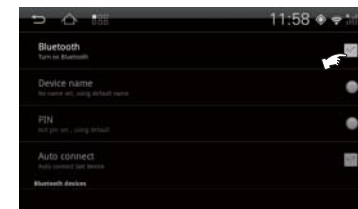

(picture-20)



➤ Dial

1) You can dial the number through your linked mobile phone or input the number through keyboard on the screen directly, like (picture -21).



(picture-21)

2) During inputting the number, the input bar will show the number you already inputted, if any mistake, please press icon to delete one by one. Press icon to dial the number, like (picture -21):



(picture-22)

3) After dial, it enters into calling interface, you can hang up by pressing , like (picture -22):



(picture-23)

 
➤ Answer

1) When a call comes in, the ring of the mobile phone will out from the speaker.

2) When a call comes in, you can choose to answer, reject or mute, if answer it, then it will enters into the answer interface, like (picture -23):

➤ Phone book

Touch “ Phone book” icon, enter phone book menu. Hereby all the number will be shown. It supports the Blue tooth's phone book, which can be transferred from by the Blue tooth from the cell phone to the car kit.

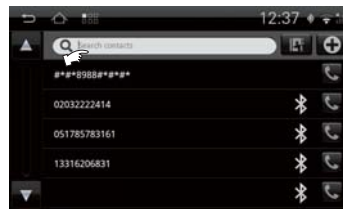


(picture-24)



1) Download the phone book

 
Inside the phone book menu, touch icon, select “ cell phone “ or “SIM” card, then touch “confirm” to download all the information to the car kit. The list of the car kit can display all the phone number, select the number and touch the “Dial” button to make a call,like picture 25

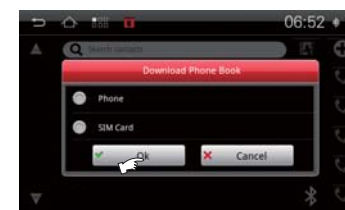

(picture-25)

2) Number searching

 
Inside the phonebook menu, touch , to move up and down to search the number you want. Or you can use number or name searching to find the current contacts ,Click on the icon, like (picture -26):

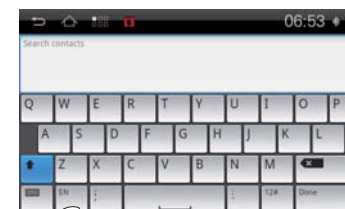

(picture-26)

A) Letter / spelling / writing input searching

 Inside the searching menu, touch , , (Pic -26 / 27/28) to shift the key board. Input the letter of each first name + given name to find the number. In case of writing input by hand, just write down the full name is enough. Touch “ ” icon, Pic -29, to select the number, then touch to dial.

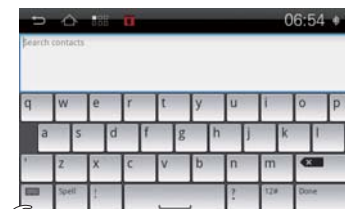

(picture-27)

During the searching, if there is wrong input, just touch to delete one by one, then touch to hide the key board. Pls note, is to shift the capital letter or low case letter. is for blank.



 
B) Digital searching

Inside the phonebook menu, touch **12#** to shift into the digital key board (Pic-30). On the keyboard, input the number directly, then touch “无成” (Pic-29) , select this number and touch “☎” to dial.



(picture-28)


On the keyboard, touch **半** to shift between Full / Half - width. **1/3** is to change the special symbol, **返回** is to return to other keyboard.

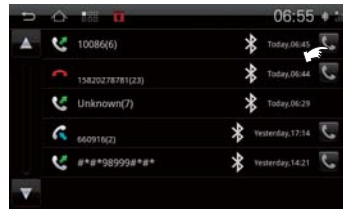

(picture-29)

➤ Bluetooth music playing

 1) If there is Bluetooth music function of this phone, the audio can be transferred from the cell phone to the car speakers. Just open the “music playing” is enough. Or touch the **音乐** on the main menu, then touch **蓝牙** , then music starts playing.

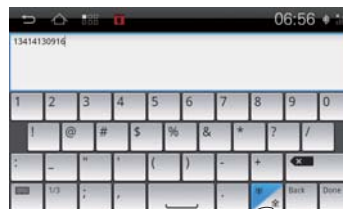

(picture-30)

2) Touch **⏮** to select previous or next track **⏸** pause; **⏭** play. See Pic-31.

⚠ Note: Only the cell phone with functions of “ Stereo playing” or “ Remote control” , can operate the music playing menu. The music of cell phone can only be played while the car kit is in the Bluetooth music playing menu.



(picture-31)



 
Music function

Can play the audio inside SD card/ USB/ Bluetooth, etc. which are connected with car kit.

- 1) Support format: MP3/WMA/WAV/MIDI
- 2) Those formats are not supported, there will be warning of “ not support”
- 3) The music must be stocked into the specified music file, if not , cannot be read.

➤ Entry / Exit

On the main screen, touch **音乐** to enter the audio playing menu, see as-(Pic-32):

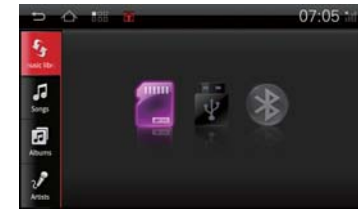


(picture-32)

Touch **返回** / **Home** or “ Home” or “ BACK” , to exit the music menu, meanwhile, music is playing at the background. Touch any other function, music will be stopped, which is completely exit.

➤ Music file selection

 1)There are 3 selections inside the Music File, SD / USB / Blue tooth. Select the one you prefer.

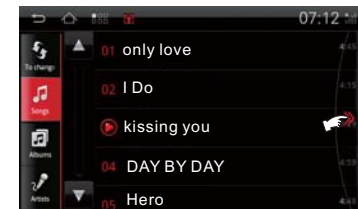


(picture-33)

➤ SD card music playing

1)、 Touch **SD** icon, to enter the SD playing list menu. Then it will show the song list, album, and artist , see as-(Pic-33):

 2)、 Touch the song name, or touch **▶** to enter playing menu. See (Pic-34).

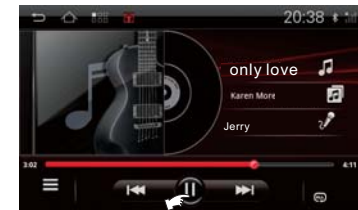

(picture-34)

3)、 Touch **≡** to return to the playing list menu. Touch **⏮** **⏭** to move up and down. Touch **⏸** to pause, **⏭** to play, **🎲** to random playing.



4) 、 Current music file selection will be memorized by car kit. When entering the Music function next time, the car kit will turn to exact menu automatically. If SD card or USB device is removed, it will turn to the Music file for your selection.

➤ Bluetooth music playing

Bluetooth music playing, please refer to the Bluetooth music playing instruction.

➤ Album list

1) Touch icon of "Album" to enter album list, see (Pic-35) . Music list appears. The cover of album appears in thumbnail format; together you can see the album and the artist name.



(picture-35)

2) Touch the "Album" to activate the songs list. If you want to enter the playing song, just touch the "song list" or "album cover", all the songs will be started playing.

3) Remark: if the album does not include the photo, then default picture appear as "album photo".



(picture-36)

➤ Artist list

1) Touch "Artist" icon to enter the artist menu, see(Pic-36). Artist cover and artist name appear.

2) Touch Artist cover to activate the song list. Touch the list or the Artist cover to enter the playing menu. All the songs will be started playing.

3) Remark: if the music file does not include the photo, then default picture appear as "Artist photo".






Video playing function

 
Video of SD card / USB / hard disc , etc can be played by this car kit.

- 1) Support format: AV1/WMV/MP/3GP/ OGG.
- 2) Those are not supported, there is warning of " Not Supported format"
- 3) All the videos must be stocked under the folder of " Video"

➤ Entry / Exit

On the mani interface, touch  to enter video playing menu. See (Pic-37):

Touch  or  or "Home" or "BACK" to exit the video playing menu, meanwhile the playing is continue at the background. When you touch another function icon, current playing stops.

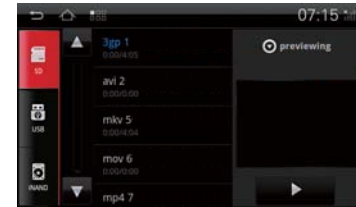







(picture-37)


➤ Video file selection


1) 3 options for video file, SD card, USB, hard disc.

➤ Video playing

1) When you select a video, silent reading starts by 5 times speed at the right side frame, see Pic-38:

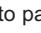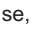2) Touch  to return to the playing list menu. Touch  or  as right & left selection, touch  to pause,  to play,  to adjust the video brightness, see Pic-41.

 3) Slide  to adjust the brightness, contrast, color, or select "standard", "soft", or "bright".

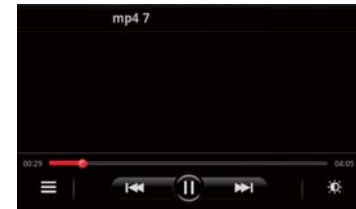


(picture-38)



Navigation function

➤ Entry or Exit

- 1) Within the main interface, touch  to enter the navigation main menu. See (Pic-39)
- 2) Touch "Home" or "Back" to exit the navigation menu. At the moment, navigation continues and won't stop until you select other function.



(picture-39)

➤ Music function within navigation

Shift from the radio / music / electronic book to navigation application, the music can be listened at the background.



(picture-40)

➤ Navigation notice

- 1) Make sure the connecting between head unit and navigation antenna is correct. Head unit need few minutes to receive the satellite signal and upgrade the system. At the moment, the screen status bar shows "positioning".
- 2) If your current position is in the tunnel, or under the bridge, or near the high building, etc., then the signal might be weak.
- 3) Make sure you should park your vehicle before set up the destination. Do not operate the navigation during driving.



(picture-41)



(picture-42)



➤ Navigation map

- 1) Due to the city construction and fast development of traffic development, navigation map should keep on updating on time. During driving, if you found the navigation guidelines is different from the read condition, please following the real condition.

➤ Navigation function

- 1) Search the destination by any types of "searching function". Navigation starts after destination set up. See Pic-42.
- 2) If the driver is familiar with this district, just driver as you know, which might be more suitable the navigation guidelines.

➤ Error


- 1) There is around 7 meters error between satellite positioning and real condition. System can correct the error automatically, but error might remain. At the moment, driving condition should be subject to the real condition.


⚠ Notice: navigation function is working while navigation module is installed.

Virtual CD Changer Operation

To store the Music from the CD disc to device ROM, total 19 disc to play for 7.5 hours. Support play list management, sort the favorite songs out, one touch to achieve, usual function clear and convenient. You can get the song easily by the files setup, play list change, auto search. Convenient and good for safely driving.

➤ Enter/Quit

Press  on the main menu to enter the VCDC interface, eg(pic-43)

Press  icon or [Home], [Back] to quit the VCDC interface, but the music continue at the background, press other function to stop the music play.



(picture-43)

⚠ Note: The song in VCDC is stored by User. (Operation please refer to the CD store function).




➤ Keyboard definition

- | | | | |
|--------------------|--------|--------------|--------------|
| List play | Seek- | Seek+ | Play/Pause |
| Open function list | delete | Fast Forward | Fast Rewind |
| Stop | Random | Repeat | EQ Equalizer |

➤ Virtual Disc select

 
- 1, Press "VCDC1" icon to enter the Disc select interface, eg (pic-44) :
- 2, Press icon to return the VCDC playing interface.
- 3, Press / icon to page up or down, or slide on the touch screen to select the Disc.

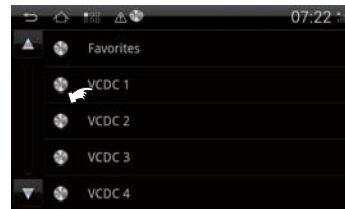

(picture-44)

➤ List Play

 - 1, Press icon on the VCDC interface to enter the VCDC list, the list including all the tracks in VCDC. eg pic-45;
- 2, Press icon or the Track to return to the VCDC playing interface.
- 3, Press / icon to page up and down, or slide on the touch screen to looking for the Track.

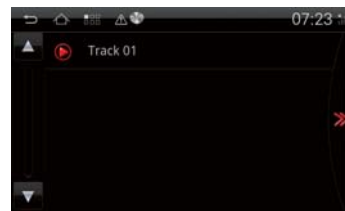

(picture-45)

➤ Delete

- 1, At VCDC interface, you can delete the song you don't like. First press icon eg pic-46, second press the song you don't like. eg pic-46;
- 2, Press " OK " icon, then the song will be delete from the Disc.



(picture-46)



➤ EQ setup

- 1, Press "EQ" icon, enter the EQ setup interface, eg (pic-47) :
- 2, Adjust the High, Middle, Bass to get your favorite Equalizer, or select the equalizer.



 
(picture-47)

➤ Process explorer Operation

➤ Enter/Quit

Press icon on the main menu to enter the process explorer interface, eg pic-48, pic-49


Press , icon or [Home], [Back] to quit.

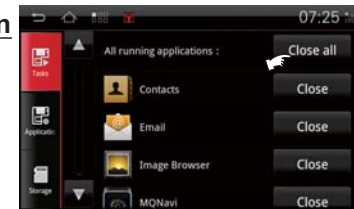

(picture-48)

➤ Process explorer Operation

 
- 1, Process Explorer show you all the software running currently. Press "Close" icon to exit this software.
- 2, Press "Exit all" icon to exit all the running software on the process explorer interface.
- 3, Press / icon to page up and down, or slide on the touch screen to select the running software.

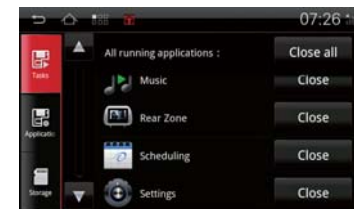

(picture-49)

➤ Software explorer operation

 
1, Press icon to enter the software explorer interface, it show you all the installed software, eg pic-50;

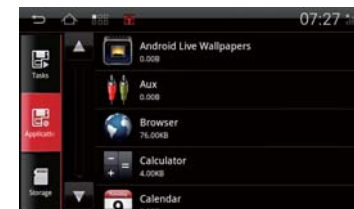

(picture-50)



 2, On the software explorer interface, user can uninstall the 3rd part software (System software non uninstall), Press the "" icon to uninstall the software and all the software data.
 3, On the Software explorer interface, Press the software to check the software information, you can uninstall, clear software data, clear software Cache, clear auto run, eg pic-51.

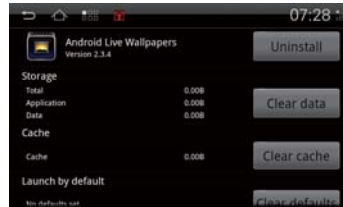

(picture-51)

➤ **Storage space**

1, Press icon to enter the Storage space interface, It will show you the device ROM, GPS SD card, DVD SD card, USB Disc storage and Remain space. eg pic -52;



(picture-52)

▮ **Volume setup Operation**

➤ **Enter/Quit**

Press on the main menu to enter the Volume setup interface, eg pic-53 pic-54;

Press , icon or [Home], [Back] to quit the Volume setup interface.

1, Volume setup for Navigation, TV, Radio, Bluetooth, Audio player, Video player, Disc, VCDC, IPOD, AUX1, AUX2, APP volume.

2, Slide icon to adjust high, middle and low, press to reset to factory default setting.

3, Press icon to change to next page.



(picture-53)

 


(picture-54)



▮ **Picture browser operation**

Picture browser can browse and edit the picture on the USB, SD card. The pictures must store in the "photo" folder.

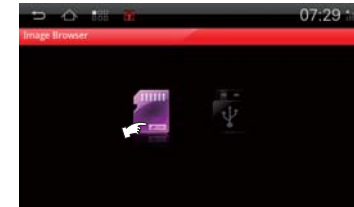

(picture-55)

➤ **Enter/Quit**

Press icon on the main menu to enter Picture browser interface, eg pic-56;

Press , icon or [Home], [Back] to quit the picture browser interface.

➤ **Picture folder select**

1, Press icon, it will auto search picture on SD card and create a picture list.

2, Press icon, it will auto search picture on USB Disc and create a picture list.



 
(picture-56)

➤ **Picture Browser**

1, Slide on the touch screen to select a picture and press it to view the picture, eg pic-56, pic-57;

2, On the view interface, press , to view the prev and next picture, press to enlarge the picture, to reduce the picture. to return to 1:1, , to flip the picture.


3, On the view interface, press to return the picture list.

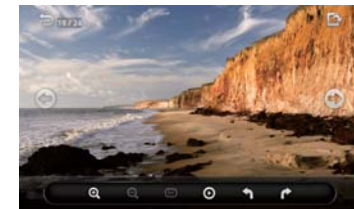

(picture-57)




➤ **Wallpaper setup**

- 1, On the picture browser interface, press  icon to enter the wallpaper setup. Eg pic-58;
- 2, Select wallpaper area, press “set wallpaper” icon, then the picture become the wallpaper on the main menu.



(picture-58)

➤ **Slide view**

 
- 1, On the view interface, press  icon to view as slide.
- 2, It is view as slide from this picture one by one.



(图-59)

➤ **Slide view setup**


- 1, On the slide view interface, press [MENU] to get the slide setup interface.
- 2, Setup the slide view turns and slide time, eg pic-59、pic-60;

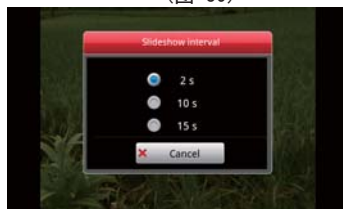

(picture-60)

Email Operation

➤ **Enter/ Quit**

Press  on the main menu to enter the Email interface, eg pic-61;

Press 、 icon or [Home], [Back] to quit the Email interface.



(picture-61)



➤ **Login Email account**

- 1, Confirm the WIFI or INTERNET is available when the first time enter Email, input your account and password and other Email setup after confirm. eg pic-62, pic-63;
- 2, Input the Incoming and send Mail Server, account, passport, com port, security type.
- 3, Login the Email interface successfully after input the Email information.



(picture-62)



(picture-63)

 
➤ **Collect and Send the Email**

- 1, Email interface including Write, In box, Draft box, Sent box, sending box, Trash box function, eg pic-64;
- 2, Email will auto collect while login the account, after that will collect by frequency, New Email will go to the In box.
- 3, Long press on the Mail to get more operate manu, including Delete, Mark read label, store the sender to phonebook.
- 4, To store the attachment into your memory, you can read the file by file manager after store.



(picture-64)

- 5, After compose the New Email, input the receiver mail address, press send button, mail will start to transfer. It will store to the Sent box after finish sending. Press Save as button to store the mail to Draft box when Editing Email. eg pic-65;

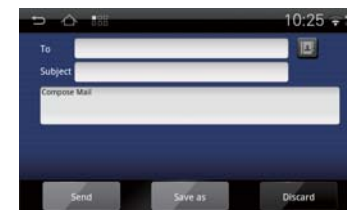

(picture-65)

 


6, Email support attachment. Press add attachment button, select file source, file source can be picture browser, file manager, or music player.

7, The Max size attachment is 10 MB, file to add attachment if bigger than 10MB.

➤ **Collect and Send Email setup**

1, Press “MENU” button to open the setup interface, including collect frequency, signature, Email Notice, Remind tone. eg pic-66;

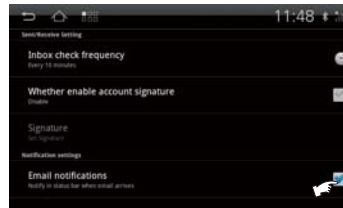

(picture-66)

DVD features operation

This unit support DVD/VCD/CD/MP3 /MP4/JPG/CD-R formats and so on.

➤ **Enter/ Quit**

Press icon to enter DVD Menu. Check (Pic-67)



(picture-67)

Press or icons to quit DVD operation and keep playing in the background.

1) Press DVD opening logo to enter DVD play menu immediately. Check (Pic-68)



(picture-68)

➤ **eject/insert the disc**

1) In the DVD menu, when the screen show the “Open” letter, please put the disc in to the DVD entrance, when the unit detected there is a disc there, it will suck in and play the disc automatically.



2) When there is disc inside the DVD, press the button, then the unit will eject the disc.

3) If you don't take away the disc in 15 seconds afrom the unit after eject the disc, the unit will suck the disc in and play it again.

➤ **Definition of Keyboard**

Numeric Keyboard Direction Keyboard Setting Keyboard Tools Keyboard

➤ **Numeric Keyboard**

1) Press icon on the screen. Check (Pic-69):



(picture-69)

2) Enter Numeric Keyboard Menu, input number to select song directly. Press “OK” to play the selected song. Numeric Keyboard will hide automatically after played for 3 seconds. It will show again when you touch the screen.

3) When selecting the song, input the number of song and press “OK” to play. If want to select NO.11 song, input 11 and press “OK” to play the selected song. If select 58, input 58 and press “OK” to play.



(picture-70)

➤ **Direction Keyboard**

Press icon on the screen. Check (Pic-70):

➤ **Definition of Direction Keyboard**

upward downward OK
 leftward rightward

➤ **Tools Keyboard**

Press icon on the screen. Check (Pic-71):



(picture-71)



➤ Definition of Tools Keyboard

- ⏮ Fast reverse ⏭ Fast-forward
- ⏪ Last song ⏩ Next song
- ⏸ Pause

➤ Setting Keyboard

Press icon on the screen.
Check (Pic-72)



(picture-72)

➤ Definition of Setting Keyboard

- Play list Stop Eject Random play Angle
- Switch A-B disc Play cycling Switch subtitle Zoom in/Zoom
- Video setting PBC Play list Accompaniment
- Information DVD system set up Back

 
⚠ Attention: Touch any position will show/hide operation dialogue. Or it will be full screen after 3 seconds.

➤ DVD System Setting


In Setting Keyboard Menu, press icon to enter DVD System Setting.
Check (Pic-73):

In DVD Setting menu, including General Set up Page, Speaker Set up Page, Preference Page, Password Set up Page and Quit.


Press “upward, downward, leftward, rightward” icon to set the content and then press “OK” to finish. Check(Pic-73):

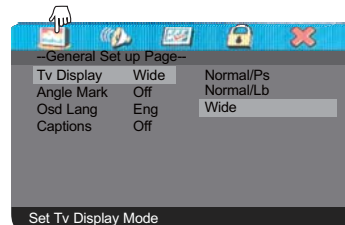


Set Tv Display Mode (picture-73)

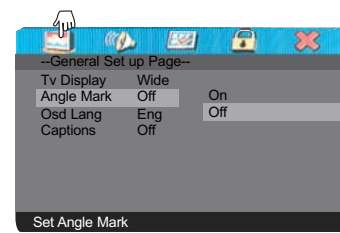 


Set Angle Mark (picture-74)

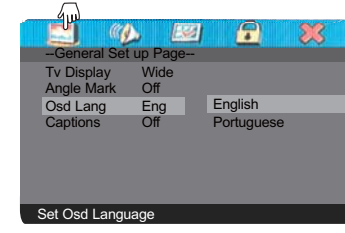 


Set Osd Language (picture-75)

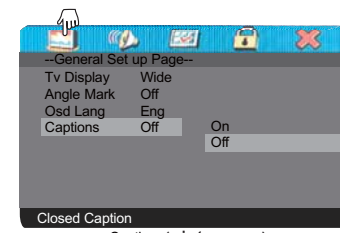 


Caption (picture-76)

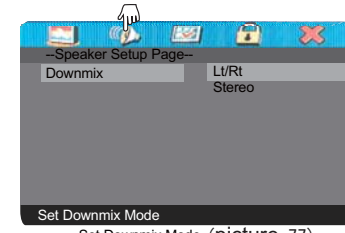 


Set Downmix Mode (picture-77)

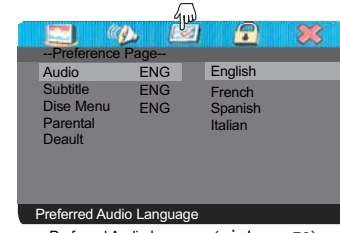 


Preferred Audio Language (picture-78)

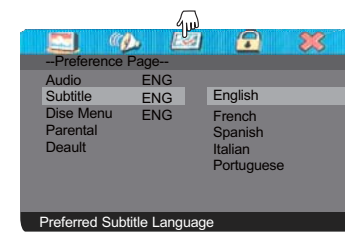 

 Preferred Subtitle Language (picture-79)

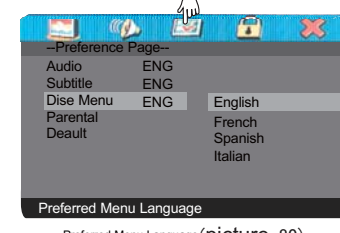

Preferred Menu Language (picture-80)

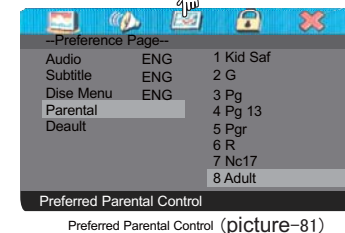 


Preferred Parental Control (picture-81)



Load Factory Setting (picture-82)



Change Password (picture-83)

Press  icon to quit DVD System Setting Menu. Preference Page Set up does not take effect until setting without disc inserted.

 
➤ play the DVD disc

When there is one DVD disc inside the unit and the disc don't have the play menu, the unit will play the disc automatically; when the disc have the play menu, click the menu icon , then will play the disc. As the (picture-84):



(picture -84)

If you want to select the track you want to listen, you can touch the song name and play this song. If the disc support the subtitle, then the unit will show the subtitle information on the screen, as the (picture -85):

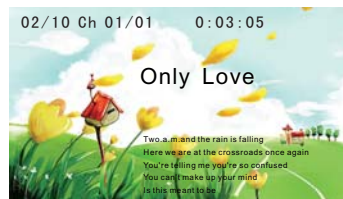

02/10 Ch 01/01 0:03:05
当前播放的章节/ 当前播放曲目号/曲目总数 已播放的时间
章节/歌曲 (picture -85)

During the playing, you can change the playing by controlling the touch menu, please check the function definition of the touch menu.



Note: the operation of the VCD/MP4 just the same as the DVD. but there is little different in the playing, when playing the MP4, it will display the image. There are many different format for the MP4 disc, such as the XVID, AVI, DIVX RM, if some of the disc can't play deal to the format, it is normal phenomenon, the playing interface just the same as the DVD playing interface.





▶ Play the CD disc

 
When there is one VCD disc inside the unit and the disc don't have the play menu, the unit will play the disc automatically; when the disc have the play menu, click the menu icon , then will play the disc. As the (picture -86):



(picture-86)


▶ Play list


- 1) In CD Play Menu, press  icon to enter Play List. All songs will show on the list. Check (Pic-94)
- 2) Press  icon or touch the playing song to back to CD Play Menu.
- 3) Press  /  icons to turn page or slip the list to choose the song.

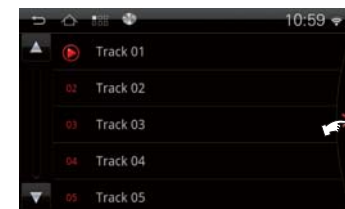

(picture-87)

▶ Storage

 
- 1) Insert CD to enter CD Play Menu. Press  icon and choose disk to store.
- 2) Press the disk and select the way of compress(Normal Compress/ Fast Compress) to store. Check (Pic-88)

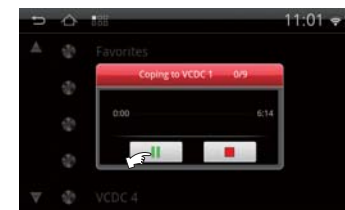

(picture-88)



 - 3) Press to stop copying and back to Play Menu automatically. Press icon again to whether to continue copying. Check(Pic-89). Press “OK” to continue copying. Press “Cancel” to close the tip and back to Play Menu.
- 4) Press icon to stop to copy and back to Play Menu automatically.

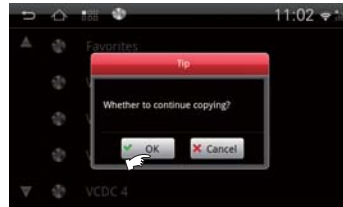

(picture-89)

⚠ Attention: If select Normal Compress to store, would continue play the song when back to Play Menu. If select Fast Compress to store, would not continue play the song when back to Play Menu.

Phone Book function of operation

This function supports saving the phone number, Email, address and etc. And it is convenient for user to search.

➤ Enter/Quit

 
Press icon in the Main Menu to enter Contacts. Check (Pic-90)

Press , icons back to Main Menu.


➤ Adding Contact

Press icon to enter Adding Contact. Check (Pic-91)

Input the information and press “Save” icon, adds successfully.

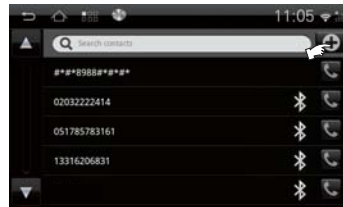

(picture-90)

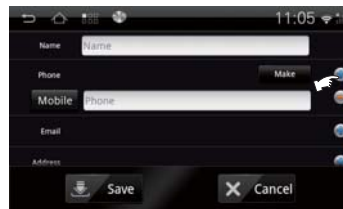 

(picture-91)



Calendar

Press icon in Main Menu to enter Calendar. Check (Pic-92)

Press , icons back to Main Menu.

➤ Usage

Press icon to select the month and year.



(picture-92)

 
Browser

Must connect the network before enter Browser. Press “Setting” icon to enter Setting Menu, and set network. (The operations refer to “Setting-Wireless & network”.) After connected, the or icon will appear the upper right of screen.

➤ Enter/Quit

Press icon to enter Browser. Check(Pic-93)

Press , icons back to Main Menu.

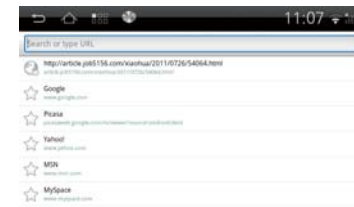


(picture-93)

➤ Browser operation

1) After input web addresses, press “GO” to view web page.

2) There are Zoom in, Zoom out and other functions on the down of web page.

 3) Click icon to view “Bookmarks”, “Most visited” and “History” records. Check(Pic-94):

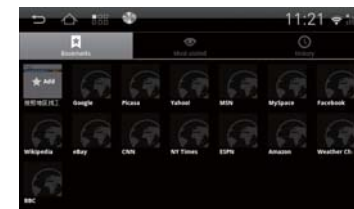

(picture-94)



Global Time

- 1) Press icon of Main Menu to enter Global Time. Check (Pic-95)
- 2) Press , icons back to Main Menu.

Operations

User can check the time of different countries. Click the City name on the screen and then select the continent – County City. Check(Pic-96):

Record

The device has VideoRecord/Camera /TV/AV functions.

Enter/Quit

Press icon of Main Menu to enter Record. Check(Pic-97)

 
Press , icons back to Main Menu. The voice of Record Source will keep running in the background, but stop recording.

Setting

- 1) Press icon to enter Record Setting. Check(Pic-98) Press icon back to Record Menu.
- 2)Record Source: Select source according to user demands, such as DVD/Camera/AV1/AV2/TV.
- 3)Resolution: Select LD(Standard Definition) HD(High Definition) to record.
- 4)Store Path: The path to store.



(picture-95)

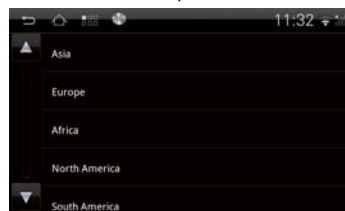

(picture-96)



(picture-97)



(picture-98)



Operations

Press icon to record, press again to stop. During recording, press the icons of left side to control the video. For example, press or icon to switch up or down record, press icon to pause playing. Check (Pic-99): Press icon back to replay list.



(picture-99)

TV

The operation of TV only works with inner TV module and external TV box.

This device supports searching channels of CMMB/DVB-TV/Analog TV/Digital TV, supports playing channel of digital TV, supports switching channels, supports Electronic Program Guide, supports subtitles. Plug the AUX input cable into AUX/DTV audio input jack.

Digital TV

With TV signal, press “Bluetooth”, input password(#*98723), press icon to choose TV module and quit. Press icon to enter Digital TV Play Interface. Check (Pic-100):

Enter/Quit Setting of Digital TV Direction Keyboard

Press icon to enter TV Setting. Press icon to show the Setting Details, press icon again or this icon to quit setting. Check (Pic-101):



(picture-100)

Instructions of Digital TV Direction Keyboard

- 1) Including Installation/System/Channel List/Parameter Setting. Check the operations of Setting on the screen.
- 2) Installation: Including Select Area/Automatic Search/Manual Search/Reset Default Setting.
- 3) System: Including System Status/Signal Detection Function Setting.



- 4) Channel List: Including Edit Channels/Favorite Channels Setting.
- 5) Parameter: Including Language/AV Control/Other Setting. There are Time on Screen/ Transparency/Color settings in Other Setting.



(picture-101)

Attention: Follow the instructions on screen to set above functions.

➤ **Installation**

Press icon, and then press icon to choose "Install" icon. Check (Pic-102). Press "OK" to enter Installation.



(picture-102)

There are Select Area/Automatic Search/Manual Search/Reset Default Setting in Installation Menu. Check (Pic-103):



(picture-103)

➤ **Select Area**

The device default country is United Kingdom.

Press icon in Installation Menu to choose "Select Area".

Press or icon to choose the country, and press "OK". Check (Pic-104)



(picture-104)



➤ **Automatic Search**

Press icon, click icon to enter Automatic Search status. Or press " " icon to enter Automatic Search status in Installation Menu. The device store automatically while searching the channels , Check (Pic-105):



(picture-105)

There is a progress bar while searching automatically. During the searching, press "OK" to stop, Press or icon to select Save/Quit/Delete.

If channel does not exist after searching,press "Quit", reset parameter and search again. If search successfully, the channels will show on the left list. Please save and quit the interface.

➤ **Manual Search**

In Installation Menu, press "Manual Search" to enter Manual Search status. The device store automatically while searching the channels. Check (Pic-106)

If channel does not exist after searching, press "OK" , reset Parameter and search again.



(picture-106)

➤ **Reset Default**

Press "Reset Default" in Installation Menu. Check (Pic-107):

Press or icon to select "Yes" or "No". Press "Yes" will recover to Factory Default Setting. On the other hand, means cancel "Reset Default".



(picture-107)



➤ **System**

Press and to choose "System" icon. Check (Pic-108) :
Press "OK" to enter System Menu.



(picture-108)

 
In the System menu, you can view the system status, signal detecting, such as (image-109) :



(picture-109)

➤ **System status**

Click button to select "System status" icon in the system menu, click the "OK" button, such as (image-110)

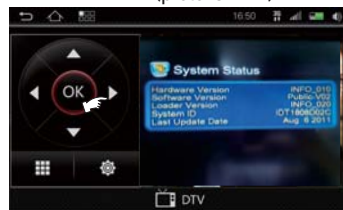

(picture-110)

➤ **Signal detecting**

Click button to select "detecting" icon in the system menu, click the "OK" button, such as (image-111):



(picture-111)



➤ **Channel list**

You can edit channel and set favorite channels in the channel list menu, Click button to select "Channel List" icon, click the "OK" button, such as (image-112):



(picture-112)

➤ **Edit Channel**

In the channel list menu, click the button to select "Edit Channel" icon, click the "OK" button, such as (image-113):



(picture-113)

- Lock
- Un lock
- Delete
- Edit

➤ **Favorite channel**

In the channel list menu, click on the button to select "favorite channel" icon, click the "OK" button, such as (image - 114):



(picture-114)

- Add
- Classification
- Move

When you have added some channels to the favorite channel list and exit the menu state, press the "OK" button, use the or button to switch TV or favorite channel list, in the favorite program list and TV channels list, Use the or key, press the "OK" button switch, such as (image -115)



(picture-115)



➤ **Parameter settings**

Click "Parameter settings" icon, parameter contains the language settings, AV control and other settings. Other settings can be displayed time on screen, transparency, color settings. The system default menu language is English.



(picture-116)

Click the "menu" button, the icon was enlarged highlighted ,such as (image-116), with the button to select "parameter settings" icon, click the "OK" button to enter the parameter setting menu.

➤ **Language settings**

1. Language contains menu language, audio language, subtitle language settings.

2. With or button to select the content you need to set, click "OK" to complete the language settings, such as (image -117):



(picture-117)

➤ **A / V control**

1. A / V control contains audio output, screen ratio, display format and other settings.

2. With or button to select the content you need to set, click "OK" to complete the settings, such as (image -118):



(picture-118)



➤ **Other settings**

1 Other settings contains setting display time, menu transparency and color settings.

2 With "" or "" button to select the content you need to set, click "OK" to complete the settings, such as (image -119):



(picture-119)

➤ **Volume Control**

In the direction key , key to increase the volume, key to decrease the volume.

➤ **Switch channels**

Click icon to enter the numeric keypad program switch, such as (image -120)

Click icon, return to the main menu interface.

Click the numbers in numeric keypad, click the "OK" button, you can switch to favorite channels. You can also click programs to change the channel.



(picture-120)

 
In the locked channels , will come out the black background to enter a password, as long as input password (default password "0000", can properly watch the channel program, such as (image -121):



(picture-121)

➤ **Program report**

When you check the program information, select the button in function keyboard, it can display the current channel sequence, name, sound, signal strength, signal quality, as well as the current program report, such as (image -122) :

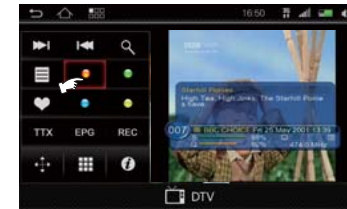

(picture-122)



Click button again, it can hide the information interface.

➤ **Electronic program guide**

Clicking the "EPG" button to display the electronic program guide, the guide display each program channel, date and time, such as (image -123):



(picture-123)

Click the button in function keyboard to switch the channel, date, program bar window;

In the program bar, click the or button to move to the next or previous program information;

In the channel bar window, click the or button to move to another channel.

Click to select your favorite program, then click "OK" button to confirm will be able to watch the selected program.

Click the button to view the detailed information of the current program.

➤ **Teletext**

Click "TTX" button to display the teletext, the teletext program channels, date and time and the channel information, such as (image -124):

 
Click "TTX" button again to exit teletext.



(picture-124)

➤ **TV / radio switch**

In the state of digital TV, press the "OK" button, you can see the TV channels list, press the "OK" button to switch to the radio mode. Click TV / R in this state can switch between TV or 7RADIO mode , such as (image -125):

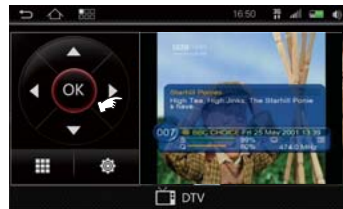

(picture-125)



➤ **Analog TV player function operation**

In the signal connected state, enter the Bluetooth interface, input the opening password (#*98723), click icon to enter the TV module selection screen, select the module then exit. In the main menu interface, click icon to enter the analog TV player function interface, such as (image-126):



(picture-126)

Click , icon or the [Home] or [BACK] key to exit the maintenance records operation .

➤ **Analog TV automatic search**

1) Click the icon to enter the automatic search, it can be automatically stored in the automatic search process , such as (image -127):



(picture-127)

2) In the Channel search process, the screen will display the TV search information and the frequency.

3) Touch other functions in the screen to exit the search.



(picture-128)

➤ **Analog television broadcasting**

Click the / Icon to view up and down program, such as (image -128):

➤ **Analog TV settings**

Click icon to enter the analog TV setting interface, such as (image -129):


Click icon to adjust the image mode and sound mode. Click "Exit" to exit the Analog TV setting.



(picture-129)




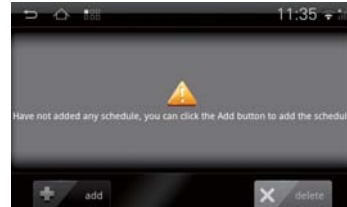 
Schedule management function operation

In the main menu, click the  icon to enter the schedule management interface, such as (image -130):

Click ,  icon or [Home] or [BACK] key to exit the schedule management interface.

➤ Add schedule

- 1) Click the "Add" icon to enter the Add interface, such as (image-131):
- 2) Input schedule content, click "Add mentioning", select a reminder time, click the  to return, will show up whether to add the schedule management, click "Yes" to complete the add.
- 3) In the schedule management interface, click the "delete" icon, you can delete the schedule.



(picture-130)




(picture-131)

2- zone settings

The system provides 2-zone playback operation function. The driver can enjoy music, radio, TV, camera, the passengers can also through the 2-zone screen to watch AUX1, AUX2, camera, TV, DVD/VCDC operation, and independently of each other.

➤ Enter / exit

In the main menu, click  icon to enter the 2-zone settings interface, such as (image-132):

Click the ,  icon or [Home] or [BACK] key to exit 2-zone settings interface.



(picture-132)






➤ operation

 
Click this icon to operate every functions ,click "synchronize"to exit operation.

Operation for Maintenance-Record

➤ Enter/Exit

Click  icon on the main menu to enter the interface of the Maintenance-Record, see the picture of -133.


Click  and  icon ,or(Home) and (Back)to exit the operation of Maintenance-Record.

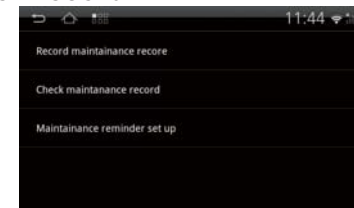


(picture-133)

➤ Operation for Maintenance-Record

 - 1) Click "Record Maintenance" to enter the interface ,note the charge for every maintenance item to record the finished car maintenance .See the picture of -134.
- 2) You can increase new maintain item in the record .
- 3) Click "Check maintenance record" to check the list for all record of maintain .See the picture of -135.
- 4) This function need car owner make record by himself .

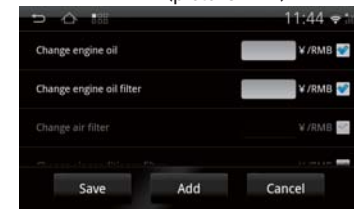


(picture-134)

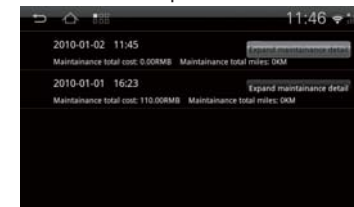 

(picture-135)

➤ Maintain remind

 - 1) Click "Maintain Remind" to setup the reminder ON or OFF ,and also can set up the mileage of remind.See the picture of -136.
- 2) The system will remind car owner go to maintain when the mileage reach to the mileage of remind been set up.

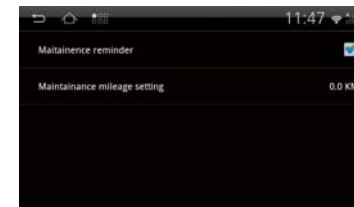

(picture-136)



3) Maintain remind function should be support by the original CANBUS information on the car. Some models can not use this function .

Operation for IPod Function



The main unit can play the Audio and Video file when it connect with IPod products.



(picture-137)

Enter/Exit





Click the icon of  on the main menu to enter the IPod interface .See the picture of -137.

When click the icon of ,  or [Home] ,[BACK] to exit the IPod setup, unit still playing ,to exit IPod playing please click other functions .










(picture-138)

IPod Operation

- 1) Click the icon of  to enter the IPod interface . See the picture of -138
- 2) Click the icon of  or  slip the touch screen to choose the file. Click the file name to play . Click the icon of  again to exit to playing interface .

IPod Icon


- | | | |
|--|--|---|
|  Main Menu |  last song |  Next song |
|  Play/Pause |  The information for Playing file | |
|  Circular Playing |  Stochastic Playing | |





GPS Monitor

This function can monitor the state of GPS, show the longitude and latitude of GPS, the speed, the movement of distance ,the time of determine and the direction of box and needle, can be used for car against theft/determine system/determine and track system .(Should be connect with GPS signal first).

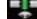Enter/Exit

Click the icon of  on the main menu to enter the GPS Monitor interface .See the picture of -139.


Click the icon of ,  or [Home] button and [BACK] button to exit the function of GPS Monitor .





(picture-139)

Operation for File Management

Enter/Exit




Click the icon of  to enter the file management interface . See the picture of -140.

Click the icon of ,  or [Home] button and [BACK] button to exit the operation of file management.



(picture-140)

File Choosing

- 1) Click the SD card icon of , system will show all the files in SD card .See the picture of -141.
- 2) Click the U disk icon of , system will show all the files in U disk.
- 3) Click the hard disk icon of , system will show all the files in hard disk .

 


(picture-141)



➤ File Searching

1) In the interface of file list , press [MENU] button to use the search function ,enter the word that you need to search ,press the button of confirm . See the picture of -142

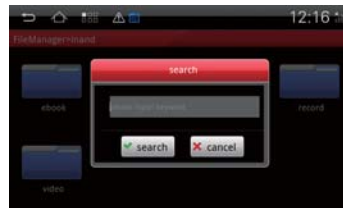


➤ File Operation



(picture-142)


- 1) The system will using music player to play music automatically when click the music file in the interface of file list .
- 2) The system will using video player to play video automatically when click the video file in the interface of file list.
- 3) The system will using electron-book browser to read the book automatically when click the book file in the interface of file list .
- 4) The system will start to install the Android application(APK file) when click the function of Android application installation .(Only support on some models.)

▄ Operation for Electron-Book

➤ Enter/Exit




Click the icon of  to enter the interface of electron-book function .See the picture of -143.

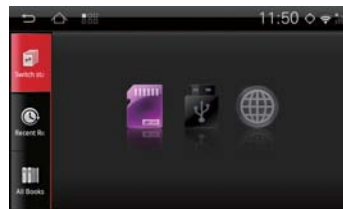 
Click the icon of ,  or [Home] button and [BACK] button to exit the operation of electron-book function .





(picture-143)

 
➤ Select the books library

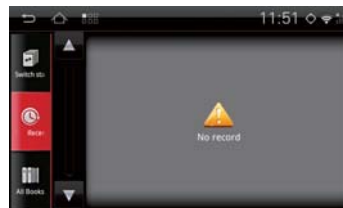- 1) Click the SD card icon of , system will show all the book files in SD card .
- 2) Click the U disk icon of , system will show all the book files in U disk.
- 3) Click the network icon of , system will show all the book files in network .



➤ Electron-Book Reading

 - 1) Showing the current book according the read time .
- 2) Showing the current reading automatically if the SD card or U disk still in the unit when enter this function .And will show the interface for main book list if the SD card or U disk be taken out .
- 3) Click the button or slip the touch screen to turn pages .
- 4) Click the icon of  to turn back to the main book list .
- 5) Click the icon of  to lessen and zoom in the proportion of the page.See the picture of -145, -146.

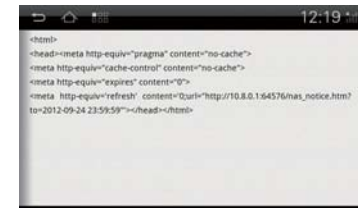

(picture-145)



(picture-146)

➤ Electron-Book reading aloud

- 1)Reading aloud from the beginning of the current page.
- 2)The volume can be adjusted .

➤ The format for the Electron-Book

- 1)The system can support the format of electron-book are EPUB,OEB, FB2 and plain text.

➤ The storage route for electron-Book

- 1)Some models only can storage the electron-book in SD card and U disk .

▄ Operation for DVR

DVR function used for record the accident (including the time, longitude and latitude),data communications ,storage video (additional camera, SD card) .



➤ **Enter/Exit**

Click the icon of to enter the interface of DVR function . See the picture of -147.

Click the icon of , or [Home] button and [BACK] button to exit the function of DVR.



(picture-147)

➤ **Functions instruction of DVR**

MENU Menu setup **Enter** confirm **录像** start to record **拍照** take photos

回放 replay Up Down Left Right


the usage of the car recorder , please refer to the specification.

Operation for Calculator

Click the icon of to enter the calculator interface .See the picture of -148.

Click the icon of , or [Home] button and [BACK] button to exit the calculator function .

 The operation way same as the normally calculator .

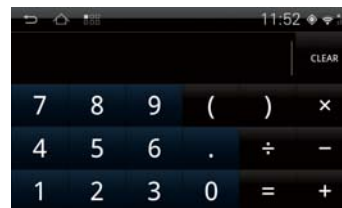

(picture-148)

AUX

This function can be used after connect with additional audio or video signal .

➤ **Enter/Exit**

Click the icon of to enter the AUX interface .See the picture of -149.

Click the icon of , or [Home] button and [BACK] button to exit the AUX interface .



(picture-149)




Operation for System Setting

The System Setting including the Video Setting, Display Setting, Dual-zone Setting etc.

➤ **Enter/Exit**

Click the icon of to enter the System Setting interface .See the picture of -150,-151,-152.

Click the icon of , or [Home] button and [BACK] button to exit the System Setting function .

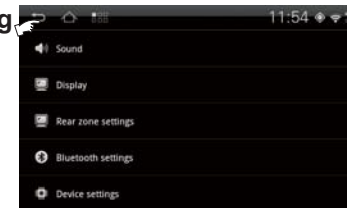 


(picture-150)

➤ **Operation for Sound Setting**

Click “Sound Setting” under the System Setting interface .See the picture of -153.

Click the icon of , or [Home] button and [BACK] button to exit the Sound Setting.

 
1) Sound Setting including the volume balance, volume equalization, system volume etc .

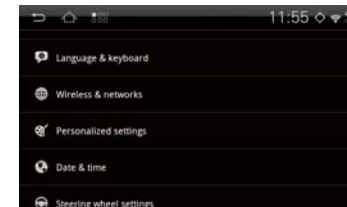


(picture-151)

2) In the volume balance setting interface, click the volume balance point

 icon to adjust the volume, click “reset” icon to restore the original car volume balance. Click , icon to adjust the volume down and up, click , to adjust the volume balance point of the car, click icon to center, as(picture-154):

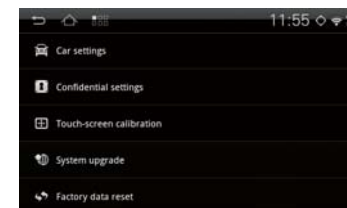

(picture-152)

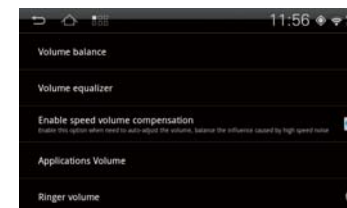 

(picture-153)



3) Turn on the speed volume compensation switch, the volume of system will automatically increase as the speed increased, decreased as the speed decreased.

4) The volume of the system determines the basis of the volume in all the programs.

➤ Display setting functional operation

In the system setting interface, click "display setting" interface, as (picture-155)

Click  ,  icon or (home) button or "back" to exit.

1. The display setting contains day backlight, night backlight, video setting options, you can adjust the screen display through the brightest, also can adjust the video interface display through the brightness, contrast, color.

➤ Bluetooth setting functional operation

In the system setting interface, click "Bluetooth setting" interface, as (picture-156)

 
1) Click  ,  icon or (home) button or "back" to exit.

2) Open the system Blue tooth device, at the same time open your phone Blue tooth device. When the system with the phone obtain the signal connection, the phone device name will be displayed and click device name, then enter connection password and the mobile phone pairing password, begin to connect your phone.

3) Successful paired and connected ,if you turn on the automatic connection, the system will initially discover paired devices and automatically connect.



(picture-154)

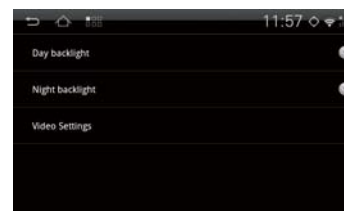

(picture-155)



(picture-156)



➤ Device setting functional operation

In the system setting interface, click "device setting" interface, as (picture-157,158):



Click  ,  icon or (home)button or (back) to exit.

1) Device setting include the device name, light inspection, brake inspection, voice navigation, reverse function, reverse mute, reversing boot, boot automatic video, key tone type, key light color, virtual disc format.

2) Select the function you need to set, and click this function to complete the setting.

➤ Language setting functional operation

In the system setting interface, click "language setting" icon enter into the language setting interface, as (picture-159):

 
Click  ,  icon or (home) button or "back" to exit.

1) Language setting interface contains the language selection, user dictionary setting and input keyboard setting.


2) The product language supports for Chinese and the English.

3)User dictionary setting: touch the panel "MENU" to select "increase".


4) Input keyboard settings default as Google Pinyin input, you can set the key sound and associating input.

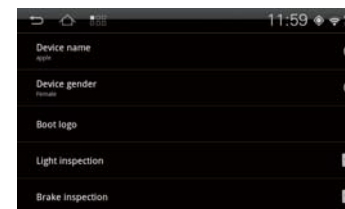

(picture-157)

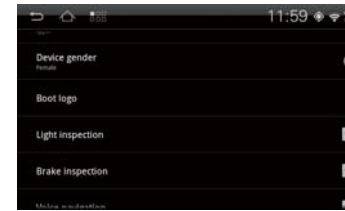 

(picture-158)

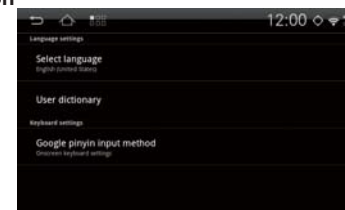 



(picture-159)



➤ **Network setting functional operation**

 
In the system setting interface, click “network setting” icon enter into the network setting interface.

Click ,  icon or (home) button or (back) to exit


1) Click on the “mobile network” icon, enter the network settings interface, set up the network data switch, network data roaming switch and access point settings, only use the 2G network switch

2) Click the name of access point to enter the setting switch and the system has been preset operator access point. So please set the operator access point according to the location of the vehicle, otherwise it may affect the normal use of the wireless network


3) Click “mobile network” enter into mobile network setting. When open only 2G network, 3G high-speed internet access will be closed. At that time, the system’s network speed will be reduced, so please set according to the actual situation, as (picture-162).

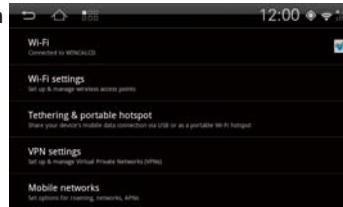

(picture-160)

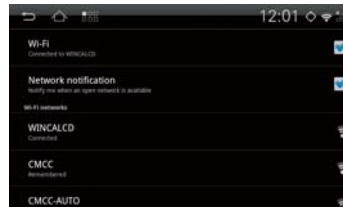 

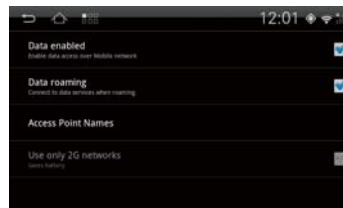 

(picture-161)

 


(picture-162)

➤ **Individuation setting functional operation**

In the system setting interface, click “individuation setting” icon to enter to individuation setting interface, as (picture-163);

Click ,  icon or (home) button or (back) to exit.

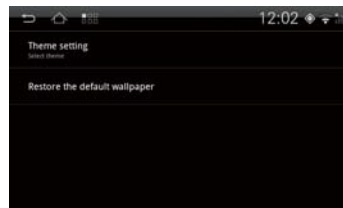

(picture-163)



 
- 1) Individuation setting contains the settings of product theme and restores wallpaper.
- 2) The theme settings preset sets of screen theme (different types of products will be preset different screen theme), select a theme and apply to the product, the style will be changed accordingly.
- 3) Wallpaper settings: you can choose the picture file as the background of the main interface; the browsing pictures can also be saved in the specified background image position to set the wallpaper.

➤ **Date and time zone setting function**

In the system setting interface, click “date and time zone setting” icon enter to time zone interface, as (picture-164);

Click ,  icon or (home) button or (back) to exit.

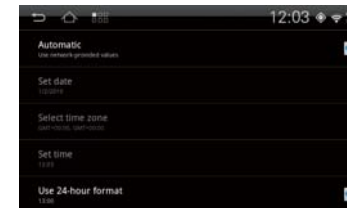

1) You can set the date display, time zone selection, time setting in the date and time zone setting interface. Click the “Auto” can automatically update the time.

 


(picture-164)

➤ **Steering wheel setting functional operation**

In the system setting interface, click “steering wheel setting” icon enter into vehicle setting interface, as (picture-165):

Click ,  icon or (home) button or (back) to exit.

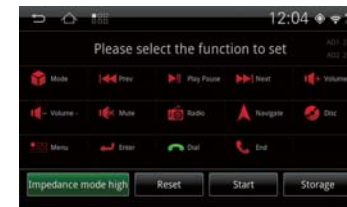

(picture-165)

 
Touch any icon in interface, click “start” icon, and press on the steering wheel where you want to set the function keys. The interface will have parameter display. Touch “storage” icon, it means set successfully when appears a successful prompt in the interface. If failure, press “reset” icon to re-repeat the above steps.



➤ Vehicle setting functional operation

In the system setting interface, click “vehicle setting” icon enter into the vehicle setting interface, as (picture-166)

Click ,  icon or (home) button or (back) to exit.

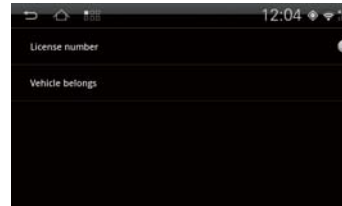

(picture-166)

- 1) You can set license number, vehicle attribution, brake warning in vehicle setting.
- 2) In the illegal inquiry procedures, you can directly input the setting license number in the illegal query website (some models do not support this feature)
- 3) Using the illegal inquiry procedures, you can visit the corresponding illegal query website through setting the vehicle attribution.
- 4) Select “brake warning” icon, the brake automatically prompts.

➤ Confidentiality setting function operation

In the system setting interface, click “confidentiality setting” icon enter to the vehicle setting interface, as (picture-167)

Click ,  icon or (home) button or (back) to exit.

- 1) Confidentiality setting contains borrowing car mode switch, code protection switch and protection code setting.

 
2) Click “open borrowing car mode” icon enter into confidentiality setting interface, as (picture-168):

3) Open borrowing car mode, the user's phone book, call records, e-mail functions are protected and cannot be used

4) Open password-protected, closing the borrowing car mode requires user input the password.



(picture-167)

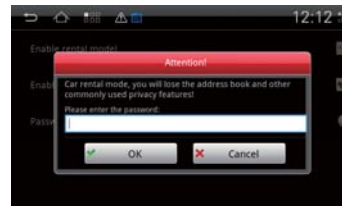


(picture-168)




➤ Touch screen calibration function operation

In the system setting interface, click “touch screen calibration” interface, as (picture-169,170);

 Click the center of the cross into calibration using the nib or tip of something, the target will automatically move, when finish the screen calibration will exit

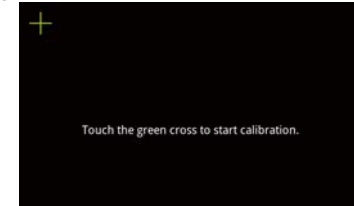

(picture-169)

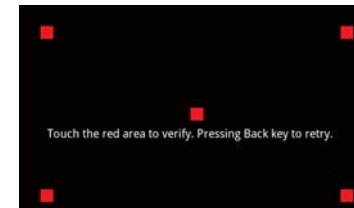 


(picture-170)

⚠ Attention: when calibrate, the center of the cross must require accurate, otherwise it will affect the touch calibration accuracy.

➤ System update functional operation

In the system setting interface, click “system update” enters into system update interface, as (picture-171):

 Click the “OK”, upgrade automatically! (Must insert the upgrade card)

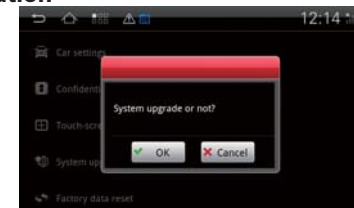

(picture-171)

 
➤ Restore factory setting functional operation

In the system setting interface, click “restore factory setting” icon enter into restore factory setting interface, as (picture-172):

- 1) Click “restore factory setting” icon will appear the menu of restore factory setting, click “OK” icon to restore, at that time the system will automatically restart.



2) Installed third-party program and all the user data will be lost after the system is restored, please backup all the system user data before restoring factory settings

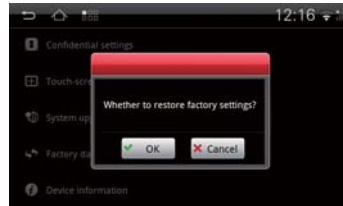

(picture-172)

➤ **Device information**

In the system setting interface, click “device information” icon enter into device information interface, as (picture-173):

1) you can check the product model, Android version, baseband version, kernel version, MCU version and version number and so on.



(picture-173)

 
Recorder Function

➤ **Enter/Quit**

Press “Bluetooth” icon to enter Bluetooth Menu. Input password (#*98723) to enter Open Mode. Press icon to enter Factory Set up Menu, touch “Recorder” icon to enter Recorder Menu. Check (Pic-57)

Press or to quit Recorder Menu.

- 1) Must insert SD card before recording.
- 2) Press “Star” icon to record. Press “Stop” icon to stop recording. Press “Play” icon to replay records. System will storage records to “mnt / inand/” file automatically.

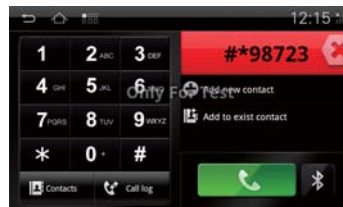

(picture-174)



(picture-175)



Note: Please check “Troubleshooting List” carefully before sending the broken device back to repair. If the problem is out of list or still could not solve the problem, please feel freely to contact our professional after-sale team!

Phenomenon	Cause	Solutions
No power supply	Wrong connection between wires and connector	Make sure all connections correct again
	Broken fuse	Find out the reason of the broken fuse; and then replace it with the identical fuse
	The build-in microprocessor is unable to work normally due to the noise and other factors	Press RESET to restore to the factory settings
Failure of Remote Control	Low Battery	Replace with new batteries
	Certain functions are forbidden under specific modes	Enter the proper mode
unable play the disk	Disk is dirty	Clean the disk
	The format of the disk is not compatible	Check the disk format
	The disk video system is not compatible	Change new disk is compatible with the video system
	Disk poor quality or damage	Replace the good quality disk
No sound	The cable is not properly connected	Re-connect the cable properly
Cannot increase the volume	This machine is running in still, slow motion or frame by frame playback	There is no sound output in still, slow motion or frame by frame playback
Particular speaker cannot output sound	Audio setup is not correct	Set the proper audio configuration
The DVD cannot display if appear the parent lockup message	Turn on the parent lockup function	Close the parent lockup function or change the setting level

Troubleshooting



Phenomenon	Cause	Solutions
Unable to Change Language (subtitle included)	Current DVD has no extra languages for selection	You can not switch to other language in a None Multi-Language disc
No Subtitled	You can only switch it over to the options as shown in the disk menu	Using the disk menu for switching
	No subtitle in this DVD	If there are no subtitles recorded for the disk, then it is unable to show subtitles.
	You can only switch it over to the options as shown in the disk menu	Use the disk menu for switchover
Failed to play back According to language in Audio and Subtitle Selected in the DVD Setup Menu Unable to switch over to another Viewing angle	The current DVD has no audio or subtitle language in the DVD setup menu.	If the disc is not recorded DVD setup menu choice language, is unable to switch to select language
Unable to view angle switch	The current DVD has no a multi-viewing angle	If the disc is not recorded with more perspective shooting scenes, can't switch to other viewing in a NO Multi-Viewing disc
	You try to switch it over to another viewing angle out there are no multi-viewing	Watch with more perspective recording scene switching angle
Picture is extremely unclear / distorted or dim in the playback	The disc has a copy protection signal (some of the disc may have this feature)	Because the DVD and anti copy analog copy protection system, so if the player has a copy protection signal disc, then in some viewed on a monitor, the picture may appear horizontal stripe or other, it does not mean that the issue of fault
No image: PIC OFF is shown	You fail to connected the manual brake wires or fail to turn on the manual brake	Connect the brake wire and when turn on the manual brake
when the ignition switch is turned to the ON position (or to the ACC position) the player automatically switches on		This is a normal function

Product specifications



power	12V DC(allowable range:9.5-17.01V)
Grounding system	Negative pole type

Display screen

Horizontal-vertical ratio	16:9
Pixel	384,000 (800*480)
Type	TFT active matrix
Color system	Full system
Range of operating temperature	-20°C+70°C
Range of storing temperature	-30°C+80°C
Angle regulation	0~50

Audio

Maximum output power	45W*4
Load impedance	4Ω(allowable range:4-8Ω)
Advance output level/impedance	4.0V/200Ω

DVD

System	DVD audio,DVD video,VCD,CD,DTS CD,and Mp3 system
Discs available	DVD audio disk, DVD video disk,VCD, CD,DTS CD.
Number of tracks	2(stereo),digital 6 tracks
MP3 encoding format	MPEG-1 and 2 and Audio level 3

FM modulator

Frequency range	87.5-108.0MHZ
Effective sensitivity	10dBu (S/N:30DB)

AM modulator

Frequency range	522-1620KHZ
Effective sensitivity	30dBu (S/N:20DB)



➤ **GPS Navigation**

main chipset	SAMSUNG S5PV210AH-A0
Chipset	Samsung CPU S5PV210AH-A0
Flash memory	4GB
FLASH	4GB
Flash memory	512MB
DDR2	512MB
GPS module	JN 3
GPS module	JN 3
Map carrier	4GB SD card
Map Software upgrade	SD card
GPS module communication mode	UART
GPS Module Communication	UART
GPS module baud rate	9600bps
GPS Module Baud rate	9600bps
External antenna type	Active, 3 V dc power supply, approximately 5 meters in length
External GPS antenna module	Active
DC supply	3V, approximately 5m in Length