

INSTRUCTION MANUAL

Video Interface and Wireless Carplay & Wired Android Auto

MASERATI TD MASERATI INTERFACE

DATA. 2020.06.24

CONTACT

- W kaptrader.com
- E kap@kaptrader.com
- A (05854) A-912 RM Tera-tower2, 201 Songpa-Dearo, Songpa-gu, Seoul, Korea
- **F** (+82) 6204 0913





CAR COMPATIBILITY SHEET

DIP_SWM (IMAGE LED		
MASERATI-TD VIDEO INTERFACE with CAN MR-PAS-190627	KPLAY CP - KPL - 191122	
POWER/CAN DIGITAL R-TOUCH NAVI C-TO	USB MIC TOUCH SPK ANT	

BRAND	MODEL	YEAR
	Quattroporte	2009 ~ 2013
MASERATI	GranTurismo	2009
	GranTurismo MC	Cack
-	a altrix	<u>.</u>



COMPONENT



INTERFACE



POWER CABLE

RGB NAVI CABLE



MODE SWITCH



OSD BOARD



LVDS CONNECTOR



LVDS OUT CABLE

LVDS IN CABLE



Touch Cable



7.0" Capacitive Touch Screen

Touch Board

Warning

Please contact your dealer if any component is missing.

COMPONENT







KPLAY Power Cable



KAP

HDMI Cable



MIC



Wifi/Bluetooth Antenna



AUX Cable

Warning

Please contact your dealer if any component is missing.

INTERFACE SPEC

1 KPLAY INPUT

- Wireless APPLE CARPLAY
- Wired APPLE CARPLAY
- Wired ANDROID AUTO
- USB storage media

2 INPUT

- 1 x Digital RGB Input (Navigation System source)
- 1 x Analog RGB Input (Navigation System output)
- 1 x CVBS(REAR CAMERA) Input (Rear camera source)
- 1 x CVBS(FRONT CAMERA) Input (Front camera source)

KAP

• 1 x LVDS Input (Car Command System)

3 OUTPUT

1 x LVDS Output (LCD Operation)

4 тоисн

- 1 x Virtual Analog Touch (Navigation System source)
- 1 x UART Digital Touch (Navigation System source)

5 POWER

- Input Power : 8VDC ~ 24VDC
- Consumption Power : 12Watt, Max

6 SWITCH INPUT MODE

- Possible to select CAR model while switching mode by DIP S/W
- By button on the Commander in the car via CAN



EXTERNAL DEVICE SPECIFICATIONS

AP



DIP SWITCH SETTING



CONNECTOR PIN ASSIGNMENT



KAP

1 P()	POWER /CAN	1 2 No. 1 3 5 7 9 11 13 15	3 5 7 4 6 8 Color Red Brown Green Green Black 8 8 8 4 1	9 11 13 15 10 12 14 16 Signal Assignment ACC REAR DET CAN1-L CAN1-L FRONT VCC GND Color Red 0	No. 2 4 6 8 10 12 14 16	Color Red Blue Brown Red Creen Black Black	Signal Assignment ACC FRONT DET CAN1-H REAR VCC MODE GND
1 P 3	OWER /CAN	No. 1 1 3 5 7 9 11 13 15 1 1 N	Color Red Brown Green Red Black 8lack	Signal Assignment ACC REAR DET CAN1-L CAN1-L GND GND Color Red	No. 2 4 6 8 10 12 14 16	Color Red Blue Brown Red Green Black Signal Ass	Signal Assignment ACC FRONT DET CAN1-H REAR VCC MODE GND GND
1 P ,	OWER /CAN	1 3 5 7 9 11 13 15	Red Brown Green Red Black	ACC REAR DET CAN1-L FRONT VCC GND Color Red	2 4 6 8 10 12 14 16	Red Blue Brown Red Green Black Signal Ass	ACC FRONT DET CAN1-H REAR VCC MODE GND
1 P ,	OWER /CAN	3 5 7 9 11 13 15	Brown Green Red Black	REAR DET CAN1-L FRONT VCC GND Color Red	4 6 8 10 12 14 16	Blue Brown Red Creen Black Signal Ass	FRONT DET CAN1-H REAR VCC MODE GND
2 T	/CAN	5 7 9 11 13 15	Green Red Black	CAN1-L FRONT VCC GND Color Red	6 8 10 12 14 16	Brown Red Green Black Signal Ass	CAN1-H REAR VCC MODE GND
2	TOUCH	7 9 11 13 15	Red Black 2 3 4 1	FRONT VCC GND Color Red	8 10 12 14 16	Red Green Black Signal Ass	REAR VCC MODE GND
2 T	гоисн	9 11 13 15	Red Black 2 3 4 I	FRONT VCC GND Color Red	10 12 14 16	Red Green Black Signal Ass	REAR VCC MODE GND
2 T	TOUCH	11 13 15	Red Black 2 3 4 1	FRONT VCC GND Color Red	12 14 16	Red Green Black Signal Ass	REAR VCC MODE GND
2 T	гоисн	13 15	Red Black 2 3 4 Io. 1 1	FRONT VCC GND Color Red	14	Green Black Signal Ass	MODE GND
2 T	гоисн	15	Black	GND Color Red	16	Black Signal Ass	GND signment
2 T	гоисн	N	2 3 4 Io.	Color Red	K	Signal Ass	ignment
2 T	гоисн	N	2 3 4 Io.	Color Red	K	Signal Ass	ignment
P				1		Y-	
2	OUCH		1	Red		17	
P		-	2	Green		X-	
P		3	3	Blue	VI AY	Y+	+
			4	White	P	X+	+
		_					
	~	0	234	5 6 7			
	(7484	N	lo.	Color		Signal Ass	ignment
		1	1	Red		R DA	ATA
	RGB	2	2	Green		G DA	ATA
3	NAVI	3	3	Blue		B DA	ATA
			4	White		SYN	1C
		5	5	Black		GN	D
		e	6	Green	AR	DVB-	TIR
			7	Orange	1	DVD) IR
				N			
I	I	04	ally	P*			



KPLAY CONNECTOR PIN ASSIGNMENT



lo	PORT	and	INFOR	MATION
	,	No	FUNCTION	
	Y	1	800x480 Resolution	DN 1 2
1	DIP SWITCH	2	1280x480 Resolution	
		► Warning	CARKE	
	-0 N	 DIP swite 	ch No. 2 has no functior	n
2	POWER		Color	Signal Assignment
-		1	Red	ACC
		2	Black	GND
		000	5 CARK	
7	тонсн	No.	Black	Signal Assignment
5	reserr	2	Green	X+
		3	White	Y-
		4	Red	Х-
				- AVINY

KAP.

AP

MAIN SCREEN



Apple Carplay Voice Control (Siri)





SETTINGS



No	INFOR	MATION	SELECTION	FUNCTION	
1	Language settings	Languages	OLEX ^I	You can change the language of the settings screen	
	RAPLAY	Auto Phone Connect	Activation	Automatically launch Android AUTO or Apple CarPlay when smartphone is connected	
		(Only for wired connection)	Disabled	Charge only when connecting a smartphone, select icor to launch Android AUTO or Apple CarPlay	
		Driver Desition	Left	Use when driver's position is left	
		Driver Position	Right	Use when driver's position is right	
2	Connection settings Use touc Android	Connection	Wireless	Activation	Connect Apple CarPlay wirelessly (Bluetooth)
		Carplay	Disabled	Used to wire Apple CarPlay	
		Use touch on	Activation	Touch is available when running Android Auto	
		Android Auto	Disabled	Touch not available when running Android Auto	
		(1	Android	Android Auto	
	0	Link Type	Carlife	do not select (Update Coming Soon)	
z	Firmware	Reset		Factory reset	
	Information	Sys Update		Update firmware using USB	

MEDIA CONTROL



Connect AUX to your car and use KPLAY's microphone

KAP

USB Media

90	INFOR	MATION	Can be used	CONTROL	NOTICE
	Apple	Wireless connection	Use all	CIRK	PLAY
1	CarPlay	Cable Connection	Functions	AUXMICTOUCH	 Multiple connections are not supported Only one device can be connected unconditionally
2	Android AUTO	Cable Connection	Use all Android AUTO Functions		URAPLAY CAN
3	USB Media	Connection	Music, Photo, Video		

iPhone Wireless connection - Connection method



1. Activate Wireless Carplay in KPLAY Settings Menu

(If Wireless Carplay is enabled, you cannot connect by wire)



3. PIN Number "0000" enter



2. Choose CarPlay-BT in Bluetooth on iPhone



4. "Allow" select



5. "Use CarPlay" select

(Once connected, Bluetooth will be

disconnected and connected via Wi-Fi)



6. Enjoy CarPlay!

If your iPhone fails to connect

- Make sure Siri is active
- Delete the Bluetooth and CarPlay records as shown below,
 disable and re-enable WiFi and Bluetooth, then try to connect again.

orget Bluetooth history	I LTE ■ 10:48 <i>ব</i>		•11 LTE 🗩	10:48 🛪	atil LTE 🔲
Settings	Settings	Bluetooth		K Bluetooth C	arPlay-BT
≻ Airplane Mode				Forget This Dovice	
😪 Wi-Fi Not Conn	nected > Now discoveral	ble as "iPhone".		Forget This Device	
Bluetooth	On > MY DEVICES				
(1) Cellular	> CarPlay-BT	Not	Connect		
Personal Hotspot	Off > OTHER DEVICE	e 2 ¹¹ 2			
VPN VPN		5 m			
_					EVLAY
C Notifications					reat Davias
Sounds & Haptics	>				Iger Device
C Do Not Disturb	>				Cancel
Eorget CarDlay History	01				
10:49 7 III	10:49 🔊		I LTE 🗩	10:49 🔊	.ul LTE 🗩
Settings	Settings	General		General	CarPlay
Ganaral			- 1	105	
	About		>		
	Software Up	odate	>		(uls)
	AirDrop		>		
Wallpaper	AirPlay & Ha	ndoff	>		
Siri & Search	CarPlay			If your car supports wireles control button on your stee	s CarPlay, press and hold the voice ring wheel to start CarPlay setup.
Face ID & Passcode	>		KIK	MY CAR	
SOS Emergency SOS	> iPhone Stor	age	> 	Car	>
Battery	Background	App Refresh	>		
Privacy				Forget This Car	
10:49 -7II LTE	10:48 🗸	•••• LTE 🗩			
Settings Wi-Fi	Settings Blueto	oth			
✓ Settings Wi-Fi	Settings Blueto	ioth			

KAP

Warning

- Due to the nature of the wireless connection, sometimes the connection is not working properly
- If you follow the same procedure as above, but the connection is not working properly, reboot KPLAY and iPhone and try again

If your Android Phone fails to connect



Warning

- Android Auto may not run even if the cable is not broken
- If you follow the same procedure as above, but the connection is not working properly, reboot KPLAY and iPhone and try again



甸

FIRMWARE UPDATE



USB

Add the firmware file provided in root folder
 * of the USB

*Root folder : Top-level folder without adding folder

2. Connect USB to the KPLAY board with the update file. The USB media will be scanned automatically Press the Home button on the top right corner of the USB Media screen and select

the Settings menu

3. Select 'Sys Update' from the Settings menu

4. After the device reboots, check the message and wait for the update to complete.



Reset

Upgrading, please wait a moment.

Warning

 If USB with firmware is connected, the update will be performed every time the device is rebooted

Sys Update

5

BUTTON CONTROL

Change Mode to Interface Screen



KAP

MAP

BUTTON	PRESS	FUNCTION	
CALL	Press	OEM screen to interface screen Interface screen to the OEM screen	
	▶ Screen cha	inge sequence : OEM > NAVI > AVI > AV2 > OEM	

To use the steering wheel button, "SteeringWheelBtn" must be "ON" in the OSD menu

GESTURE CONTROL

Change Mode to Interface Screen



KAP

GESTURE		FUNCTION
C uin	Swipe left	Interface screen ► OEM screen
Swipe	Swipe right	OEM screen ► Interface screen
▶ Warning	1	C BREACH

To use gesture , "Gesture" must be "ON" in the OSD menu

HOME ICON CONTROL

Change Mode to OEM Screen



KAP

BUTTON	PRESS	FUNCTION	
Return	Touch	Interface screen to the OEM screen	
Warning			CREAT

To use the icon, "HomelCon" must be "ON" in the OSD menu



MENU	Calibrati	on N	AVI
OSD IR-Ctrl Utility	Factory Reset Calibration Version	Execute Ca: Execute Ca: FDSHOOKPX-18	ncel ncel 80112
	CIR		

TOUCH CONTROL

Touch Calibration



KPLAY Connection – Screen Setting



KPLAY Connection – Touch Setting



KAP



Touch in the center of the "+" icon

CAN connection



GranTurismo LVDS cable connection



Basic information

SIC INFORM	ation			
	1	2		3
	MENU	Optic	on	NAVI
	4 Config	5 earCam-Type	6 xtDevice	
	Option	RearCam-Power	Auto	
	Image	RearCam-Det	GEAR	
	Screen	AV Mode	Off	
	Parking	FrontCam-Type	ExtDevide	

KAP

	MENU	2	Mode State	3 Interface Status
4	First Menu	5	Second Menu	6 Third Menu
		_	MAY	



No	OSD(On Screen Display) Board Control
7 MENU	 The OSD screen can be switched ON/OFF Return to previous menu
8 SEL	 Select the currently active item If the OSD screen is off, mode changes can be made.
9 UP	 Move up from the menu Increase the selected item value
10 DOWN	Move down from the menuDecrease the selected item value

Config Menu

st Menu	Second Menu	Third Menu	Description	
Config	NAVI-RGB	DIGITAL : :	Setting the Connected NAVI Model	
	DVB-T(DMB)	Default :	Setting the Connected DVB-T Model	-
	DVD	Default :	Setting the Connected DVD Model	
	Reset	Execute Cancel	Reset to default value of Config menu	

CARRYLAN

KAP

KAF

Option Menu

irst Menu	Second Menu	Third Menu	Description
Option	NAVI COM	HMS FINE :	Set up manufacturer of woodworking device for UART Touch use
		OFF	Disable feature
	-	OEM	Original Camera
	RearCam-Type	ExtDevice	Equipped with external camera
	C/	ON	+ 12V continuous supply
NAY	RearCam-Power	AUTO	+ 12V supply only in Rear camera mode
		OFF	+ 12V off
	RearCam-Det	GEAR	Detected by CAN
		WIRE	Detected by Rear-Det Wire
		OEM	Original Camera
	FrontCam-Type	ExtDevice	Equipped with external camera
	FrontCam-Power	ON	+ 12V continuous supply
nel.		AUTO	+ 12V supply only in Front camera mode
		OFF	+ 12V off
	FrontCam-Det	CAN	Detected by CAN
		WIRE	Detected by Front-Det Wire
	HomelCon	ON	Use the home icon feature
		OFF	Disable feature
	FrontCam-RcvOpt	ON	The time (1-30 seconds) that FrontCam is displayed before returning to the previous state in RearCam.
		OFF	Disable feature
	AV Mode	ON	Video(CVBS) Input (If RearCam-Type is OEM)
		OFF	Disable feature
	Steering	ON	Switching screen by using Steering wheel button
	WheelBtn	OFF	Do not use features.
	Costure	ON	Use the Gesture feature of Capacitive Touch
	Gesture	OFF	Disable feature
		ON	DVB-T device control UI output function
		OFF	Disable feature
		ON	DVD device control UI output function
		OFF	Disable feature
	Reset	Execute	Option Menu all Reset

Image Menu

irst Menu	Second Menu	Third Menu	Description
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Saturation	NUN	[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Saturation
	Hue		[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Hue
	Sharpness		[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Sharpness
	Color-RED		[NAVI MENU ONLY] Adjust the value of RED
	Color-GREEN		[NAVI MENU ONLY] Adjust the value of GREEN
	Color-BLUE		[NAVI MENU ONLY] Adjust the value of BLUE
	Reset	Execute	Image Menu all Reset

KAP

KAF

Screen Menu

rst Menu	Second Menu	Third Menu	Description		
Screen	Horizontal		Output screen horizontal movement		
	Vertical		Output screen vertical movement		
	Scale X Up	AVINY	Deduce / increase output correspondent		
	Scale X Down	6	Reduce / Increase output screen width		
	Scale Y Up		Poduco / Incroaso Output Scroon Height		
	Scale Y Down		Reduce/ increase Output screen height		
	Reset		Screen menu all reset		

CARRYLAN

OSD Menu

First Menu	Second Menu	Third Menu	Description	
OSD	Horizontal	value	OSD Menu Horizontal Shift	
	Vertical	value	OSD menu vertical Shift	
	Display Time	value	OSD Menu Display Time (in seconds)	
	Transparency	value	OSD menu transparency	
	Language		OSD menu display language	
	Reset	Execute	Initialize OSD settings	

CARRYLAN

IR-Ctrl Menu

First Menu	Second Menu	Third Menu	Description		
IR-Ctrl		Sel	and RIAY		
DVB-T(DMB)	DVB-T(DMB)	Learn	CARKEN		
		Cancel	- NF		
	C/	Sel			
PLAY	DVD	Learn			
		Cancel			
Notice	In order to work with the IR learning function, a separate IR cable is required. 1. In DVB-T / DVD menu, select User in Sys (OSD list) or User (learned contents). 2. Select Learn from the OSD menu. 3. Before using IR learning function, select All-Clear to delete existing stored data.				
	is the same and save it.	troi button to be used in ea	ch icon once in New Code, press once again in Cim Code to confirm it		

Utility Menu

First Menu	Second Menu	Third Menu	1	Description	U.
Utility	Factory Reset	Execute	Initialize all settings	NY INY	
	Calibration	Execute	Run Calibration mode		
	Version	- KYL	FDSYOOKRX-180209 (Check for future upgrades)		
	FF				
	<u>Motor Mode</u> FD=FORD BM=BMW BE=BENZ MA=MASERA	el <u>PIP Model</u> Ha S3=Sync3 PP=PIP V=LVDS	ersion <u>National</u> Special CN=CHINA KR=KOREA JP=JAPAN US=U.S.A	Software Software Year Month	Software Version
	LX=LEXUS				





A-912 Rm Tera-tower2, 201 Songpa-daero, Songpa-gu, Seoul, Korea

F. (+82) 6204-0913

E. kap@kaptrader.com