

INSTRUCTION MANUAL

Video Interface and Wireless Connected Car System

FORD SYNC3 INTERFACE

DATA. 2020.05.06

CONTACT

- W kaptrader.com
- E kap@kaptrader.com
- A (05854) A-912 RM Tera-tower2, 201 Songpa-Dearo, Songpa-gu, Seoul, Korea
- **F** (+82) 6204 0913





KAP **CAR COMPATIBILITY SHEET** LAY MAADOA9 IMAGE [M/S dID] [TED] FORD - SYNC3 - TDC2 VIDEO INTERFACE with CAN FS - PAS - 170830 VIA FRONT REAR LVDS-OUT LVDS-IN DIGITAL TOUCH NAVI POWER/CAN 20 5/ BRAND MODEL **SCREEN** YEAR F-150 FX4 2015 ~

ARAYLA

FORD	Mustang Ranger		2017 ~
FORD			2018 ~
	Ecosprot	8"	2019 ~
	МКХ		2018 ~
	МКZ		2018 ~
LINCOLN	Contnental	VLAY	2018 ~
	Navigator	12"	2019 ~









INTERFACE SPEC

ARAYLA

CARAFPLAY

CARAFINY

KAP

CARAFLAY

1 KPLAY INPUT

- Wireless APPLE CARPLAY
- Wired APPLE CARPLAY
- Wired ANDROID AUTO
- USB storage media

2 INPUT

1 x DIGITAL RGB IN (HDMI PORT)

RAPLAY

- 1 x ANALOG RGB IN (7PIN)
- 1 x CVBS FRONT CAM IN
- 1 x CVBS REAR CAM IN
- 1 x LVDS IN CAMMAND SYSTEM TRAPLAY

3 OUTPUT

1 x LVDS OUT OPERATION

4 TOUCH

- VIRTUAL ANALOG TOUCH (4PIN)
- UART DIGITAL TOUCH

5 POWER

- Input Power: 8VDC ~ 24VDC
- Consumption Power: 12Watt, Max

6 SWITCH INPUT MODE

Possible to select CAR model while switching mode by DIP S/W CARAFINY

CARAFLAY

By button on the Commander in the car via CAN

CIRAR



EXTERNAL DEVICE SPECIFICATIONS

TRAYLAN



INSTRUCTION MANUAL

DIP SWITCH SETTING



ARAYLA

CONNECTOR PIN ASSIGNMENT



CAROCYLAN

No	PORT		All	INFOR	ΜΑΤΙΟ	N	V D
	Y		57 68	9 11 13 15 10 12 14 16		1	
		No.	Color	Signal Assignment	No.	Color	Signal Assignment
		1	Yellow	ACC	2	Yellow	ACC
	POWER	3	Brown	REAR DET	4	Blue	FRONT DET
	/CAN	5	Green	CAN LOW	6	Orange	CAN H
	,	7			8	- V'	
		9		A ION	10		
		11	RED	ACC	12	Red	REAR POWER
		13	Red	FRONT POWER	14	Green	MODE
		15	Black	GND	16	Black	GND
			I				
		No		Color		Signal Ass	ignment
2	тоисн	No		Color Red		Signal Ass Y	ignment
2	тоисн	N o 1 2		Color Red Creen		Signal Ass Y. X.	iignment -
2	тоисн	No 1 2 3		Color Red Green Blue	PLAY	Signal Ass Y. X. Y4	ignment - -
2	тоисн	N a 1 2 3 4		Color Red Green Blue White	7LAY	Signal Ass Y. X. Y+	signment - - +
2	тоисн	No 1 2 3 4		Color Red Green Blue White	7LAY	Signal Ass Y. X. Y- X-	signment
2	тоисн		2 3 4	Color Red Creen Blue White	<i>qlay</i>	Signal Ass Y. X. Y.	signment - - -
2	тоисн			Color Color Color Color	9LAY	Signal Ass Y- X- X- X- Signal Ass	signment
2	тоисн	No 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4	2 3 4	Color Red Green Blue White 5 6 7	<i>pla</i> y	Signal Ass Y. Yı Xı Xı Xı Signal Ass R DA	signment
2	TOUCH	No 1 2 3 4 1 2 3 4 1 2 No 1 2		Color Color Color Color Red Creen Color Color Color Color Color Red Creen	PLAY	Signal Ass Y- X- X- Signal Ass R DA G DA	signment
2	TOUCH RGB NAVI	No 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 1 2 3		Color Creen Color	γ _{LA} γ	Signal Ass Y. X. Y. X. Signal Ass R DA G DA B DA	signment
2	TOUCH RGB NAVI	No 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4		Color Cireen Color	PLAY	Signal Ass YA XA XA Signal Ass R DA G DA B DA SYM	signment
2	TOUCH	No 1 2 3 4 1 2 3 4 No 1 2 3 4 5		Color Image: Color Red Image: Color S Color Red Image: Color Red Image: Color Red Image: Color Blue Image: Color Blue Image: Color Red Image: Color Blue Image: Color Black Image: Color		Signal Ass Y. X. Y. X. Y. Signal Ass Signal Ass B DA SYN G N	signment
3	TOUCH	No 1 2 3 4 1 2 3 4 1 2 3 4 5 6		Color Image: Color image	PLAY	Signal Ass Y- X- X- X- X- X- X- X- X- X- X	signment
2	TOUCH	No 1 2 3 4 1 2 3 4 1 2 3 4 5 6 7		Color Image: Color image	ALAY AR	Signal Ass YA XA YA XA XA XA XA XA XA XA XA XA X	signment
3	TOUCH RGB NAVI	No 1 2 3 4 1 2 3 4 1 2 3 4 5 6 7		Color Image: Color image	7LAY	Signal Ass Y- X- Y- X- Signal Ass Signal Ass R DA G DA B DA SYN GN DVB-	signment



INSTRUCTION MANUAL

1 AY

KPLAY CONNECTOR PIN ASSIGNMENT





CARDEVLAN

No	PORT	and	INFORM	MATION
		No	FUNCTION	
PLA	8	1	800x480 Resolution	
1	DIP SWITCH	2	1280x480 Resolution	
		► Warning	g	
			tch No. 2 has no function	
	MON	DIF SWI	ten No. 2 has no function	
Z.R	APLAY			KAP
2	POWER	D	Color	Signal Assignment
2	POWER	No.	Color Red	Signal Assignment ACC
2	POWER	No. 1 2 2	Color Red Black	Signal Assignment ACC GND
2	POWER	No. 1 1 2 1 2	Color Red Black	Signal Assignment ACC GND
2	POWER	No. 1 2 No. No. No. No.	Color Red Black	Signal Assignment ACC GND Signal Assignment
2	POWER	No. 1 2 1 2	Color Red Black Color Black	Signal Assignment ACC GND Signal Assignment Y+
2	POWER	No. 1 2 No. 1 2	Color Red Black Color Black Color Black Green	Signal Assignment ACC GND Signal Assignment Y+ X+
2	POWER	No. 1 2 No. 1 2 No. 1 2 3	Color Red Black Color Black Color Black Green White	Signal Assignment ACC GND Signal Assignment Y+ X+ Y- Y-

CARAFILAY

CARAFLAY



KAP



MAIN SCREEN



CARDEVIN

KAP

KPLAY CONTROL

SETTINGS

RAPLAY

- . · · /

		Settings		•	Ŋ
	Auto Phone Con	nect			
(7)	Driver Position		<	Left	>
	Wireless Carplay				
î	Use touch on An	droid Auto			
	Link Type		<	Android	>

0	INFORM	ATION	SELECTION	FUNCTION
	Language settings	Languages	RAN	You can change the language of the settings screen
	NO N	Auto Phone Connect	Activation	Automatically launch Android AUTO or Apple CarPlay when smartphone is connected
	AYLA	(Only for wired connection)	Disabled	Charge only when connecting a smartphone, select icon to launch Android AUTO or Apple CarPlay
	·		Left	Use when driver's position is left
		Driver Position	Right	Use when driver's position is right
	Connection	Wireless	Activation	Connect Apple CarPlay wirelessly (Bluetooth)
	settings	Carplay	Disabled	Used to wire Apple CarPlay
		Use touch on	Activation	Touch is available when running Android Auto
		Android Auto	Disabled	Touch not available when running Android Auto
		(17	Android	Android Auto
		Link Type	Carlife	<mark>do not select</mark> (Update Coming Soon)
	Firmware	Reset	VA	Factory reset
	Information	Sys Update		Update firmware using USB

CARAFILAY

KPLAY CONTROL

iPhone Wireless connection - Connection method

1. Activate Wireless Carplay in KPLAY Settings Menu

(If Wireless Carplay is enabled, you cannot connect by wire)

3. PIN Number "0000" enter

2. Choose CarPlay-BT in Bluetooth on iPhone

4. "Allow" select

(Once connected, Bluetooth will be

disconnected and connected via Wi-Fi) CARAFILAY

CAROCYLAN

KAP

KPLAY CONTROL

If your iPhone fails to connect

- Make sure Siri is active
 Delete the Bluetooth and CarPlay records as shown below,
- 3. disable and re-enable WiFi and Bluetooth, then try to connect again.

Forget Bluetooth history	10:48 🕫 🗤	I LTE - 10:48 7II LTE -
Settings	Settings Bluetooth	<pre> CarPlay-BT</pre>
Airplane Mode	Bluetoath	Eorget This Device
🛜 Wi-Fi Not Connected >	Now discoverable as "iPhone".	
Bluetooth On >	MY DEVICES	
(1) Cellular	CarPlay-BT Not Conne	
Personal Hotspot Off >		
VPN VPN		
Notifications		CIRCULAT
Sounds & Haptics		Forget Device
C Do Not Disturb	MON	Cancel
Forget CarPlay History	DIRE STOR	
10:49 -7I LTE -	10:49 7	I LTE ● 10:49 1 11 LTE ●
Settings	Settings General	CarPlay
General		
Control Center	About	
AA Display & Brightness	Software Update	wź l
(f) Accessibility	AirDrop	
Wallpaper	AirDiop	
Siri & Search		
	CarPlay	
Face ID & Passcode	CarPlay	If your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup.
Face ID & Passcode > S0S Emergency SOS	iPhone Storage	If your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR
Face ID & Passcode > S0S Emergency SOS > Battery >	iPhone Storage Background App Refresh	If your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR
Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Solution of the system Image: Soluti	iPhone Storage Background App Refresh	If your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR Car Forget This Car
Image: Face ID & Passcode > Image: Face ID & Passcode <td>iPhone Storage Background App Refresh</td> <td>H your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR Car Forget This Car</td>	iPhone Storage Background App Refresh	H your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR Car Forget This Car
Face ID & Passcode S0S Emergency SOS Battery Privacy Privacy 10:49 1 < Settings	iPhone Storage Background App Refresh	 If your car supports wireless CarPlay, press and hold the voice control button on your steering wheel to start CarPlay setup. MY CAR Car Forget This Car
Face ID & Passcode > S0S Emergency SOS > Battery > Privacy > 10:49 -7	iPhone Storage Background App Refresh	<pre></pre>

Warning

- Due to the nature of the wireless connection, sometimes the connection is not working properly
- If you follow the same procedure as above, but the connection is not working properly, reboot KPLAY and iPhone and try again

KPLAY CONTROL

If your Android Phone fails to connect

ARAYLAN

- If you follow the same procedure as above, but the connection is not working properly,
 - reboot KPLAY and iPhone and try again

쉡

 \odot

 $\langle \overline{0} \rangle$

FIRMWARE UPDATE

USB

Scanning USB Device...

Settings

Reset

Add the firmware file provided in root folder
 * of the USB

ARAYLA

*Root folder : Top-level folder without adding folder

2. Connect USB to the KPLAY board with the update file. The USB media will be scanned automatically Press the Home button on the top right

corner of the USB Media screen and select the Settings menu

3. Select 'Sys Update' from the Settings menu

CARAFINY

CARAN

4. After the device reboots, check the message and wait for the update to complete.

FYLAY

Upgrading, please wait a moment.

Warning

 If USB with firmware is connected, the update will be performed every time the device is rebooted

5

~

Sys Update

CAROCYLAN

KAP

BUTTON CONTROL

Change Mode to Interface Screen

BUTTON	PRESS	FUNCTION
LEFT	Long press	OEM screen to interface screen Interface screen to the OEM screen
VOICE	Screen char	nge sequence : OEM > NAVI > AV1 > AV2 > OEM

Warning

"Left" or "Voice" must be activated in Steering Wheel item in OSD menu CARAFLAY

CARAFILAY

CARDEVLA

KAP

BUTTON CONTROL

BUTTON	PRESS	FUNCTION
LEFT	Long press	OEM screen to interface screen Interface screen to the OEM screen
VOICE	Screen chan	ge sequence : OEM > NAVI > AVI > AV2 > OEM
Warning		
	Turn on NO.8 on t	he dip-switch to use the following buttons.
ON 6 7 8	"Left" or "Voice" m	ust be activated in Steering Wheel item in OSD menu

CALL CONTROL

ScrChg Option

ARAYLAN

PARKING CONTROL

Parking Line

1 Parking Line Display

ARDYLA

2 Horizontal / Vertical

I	MENU	Parking	REAR
l	Config	OPS Display	Off
l	Option	Line Display	Off
ł	Image	Warnings Lang	English
1	Screen	Horizontal	50
l	Parking	Vertical	50

• Pressing this Horizontal / Vertical menu, The OSD screen automatically disappears.

• Please adjust from the parking line Screen.

CARAFLAY

Touch in the center of the "+" icon

CARAFINY

CARAFINY

CARAFLAY

CARAFILAY

Config I	Menu			
First Menu	Second Menu	Third Menu	Description	
Config	NAVI-RGB	DIGITAL : :	Setting the Connected NAVI Model	
	DVB-T(DMB)	Default : :	Setting the Connected DVB-T Model	
	DVD	Default	Setting the Connected DVD Model	
FPLAX	Reset	Execute Cancel	Reset to default value of Config menu	
	KAF		CARAYLA	

CARAFINY

CARAFINY

CARRYLAN

KAP

KAP

CARARY

CARGYLAY

Option Menu

- . · · /

t Menu	Second Menu	Third Menu	Description
		OEM	Original Camera
ption	RearCam-Type	ExtDevice	Equipped with external camera
		ON	+ 12V continuous supply
	RearCam-Power	AUTO	+ 12V supply only in Rear camera mode
		OFF	+ 12V off
	DearCam Det	GEAR	Detected by CAN
	RearCam-Det	WIRE	Detected by Rear-Det Wire
		ON	Use "REAR" video input port as VIDOE input
	AV Mode	OFF	Disable feature
		OEM	Original Camera
	FrontCam-Type	ExtDevice	Equipped with external camera
		ON	+ 12V continuous supply
	FrontCam-Power	AUTO	+ 12V supply only in Front camera mode
		OFF	+ 12V off
	- 10 D I	CAN	Detected by CAN
	FrontCam-Det	WIRE	Detected by Front-Det Wire
-	FrontCam-RcvOpt	ON	The time (1-30 seconds) that FrontCam is displayed before returning to the previous state in RearCam.
	YLAT	OFF	Disable feature
	1.	LEFT	Use the 'Left' button of the Steering Wheel
	Steering WheelBtn	VOICE	Use the 'Voice' button of the Steering Wheel
		OFF	Disable feature
		ON	DVB-T device control UI output function
		OFF	Disable feature
		ON	DVD device control UI output function
	01000	OFF	Disable feature
	ScrChg-Call	ON	Switch to OEM screen when bluetooth phone comes in, return to original when phone terminated
		OFF	Disable feature
	ScrChg_Climate	ON	When there is a change of air conditioning, it switches to OEM screen for 2 seconds and then returns to original state
	V*	OFF	Disable feature
	ScrChg-Audio-Vol	ON	When there is a change in audio volume, it switches to OEM screen for 2 seconds and returns to original state
		OFF	Disable feature
	NAVI COM	HMS FINE :	Set up a manufacturer of woodworking device for UART Touch use
		OFF	Disable feature
	Reset	Execute	Option Menu all Reset

CARDEVLAN

Image Menu

CARAFINY

CARAFINY

CARAFILAY

First Menu	Second Menu	Third Menu	Description
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Saturation	NUNY	[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Saturation
	Hue	Ker .	[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Hue
MON	Sharpness		[AV / REAR / FRONT / DVD / DVBT MENU] Adjust the value of Sharpness
dr.	Color-RED		[NAVI MENU ONLY] Adjust the value of RED
	Color-GREEN		[NAVI MENU ONLY] Adjust the value of GREEN
	Color-BLUE		[NAVI MENU ONLY] Adjust the value of BLUE
	Reset	Execute	Image Menu all Reset
		(AK*	

CARAFILAY

CARDENLA

KAP

CARAFLAY

CARREY

Screen Menu

		-	AP	()
First Menu	Second Menu	Third Menu	Description	V ^r
Screen	Horizontal		Output screen horizontal movement	
	Vertical		Output screen vertical movement	
	Scale X Up	NIN		
	Scale X Down	RX	Reduce / increase output screen width	
MN	Scale Y Up		Deduce (Increase Output Server Unight	
d M.	Scale Y Down		Reduce/Increase Output Screen Height	
	Reset		Screen menu all reset	PLAY
	KA		CARREN	
			V	
				VAP

CARREYLAN

CARAFILAY

CARAFINY

CARAFILAY

First Menu	Second Menu	Third Menu	Description
Parking	Line Display	ON	Show parking line
		OFF	Do not show parking lines
	OPS Display	ON	Show OPS
		OFF	Do not show OPS
	Warnings Lang		Set warning text language
	Horizontal		Moving a parking line horizontally
	Vertical		Moving a parking line vertically
	Transparency		Parking line transparency
	Reset		Parking menu all reset

CARAFILAY

CARRYLAN

KAP

KAP

CIRKY

CARAFILAY

CARAFINY

CARAFINY

CARAFILAY

OSD	Horizontal		
		value	OSD Menu Horizontal Shift
	Vertical	value	OSD menu vertical Shift
	Display Time	value	OSD Menu Display Time (in seconds)
	Transparency	value	OSD menu transparency
NIN	Language		OSD menu display language
RA	Reset	Execute	Initialize OSD settings

CARAFILAY

CARAFINY

CARRYLAN

KAP

CARAFILAY

CIRKY

CAROCYLAN

A-912 Rm Tera-tower2, 201 Songpa-daero, Songpa-gu, Seoul, Korea

F. (+82) 6204-0913

E. kap@kaptrader.com